

# Instruction Manual

---

## CUBICLE 1 OPEN

Please use this instruction manual to fix your  
DIY toilet cubicle delivered by Cubiclexpress




**CUBICLE  
XPRESS**

Delivery at the Speed of Business....


## What's in the Box?

1. 2 x Wall pilasters (150 x 1800mm)
2. 1 x Door (600 x 1780mm)
3. 1 x Divider (1500 x 1800mm)
4. 2 x Support Legs
5. 3 x Hinges
6. 1 x Indicator Lock
7. 1 x Door Knob
8. 1 x Coat Hook
9. 1 x 900mm Top rail
10. 2 x U Profile (1800mm)
11. 2 x H Profile (1800mm)
12. 1 x L Profile (1800mm)
13. 1 x I Profile (1500mm)
14. 1 x Rubber Beading (1800mm)
15. Screws & Gittis


# Hardware and Profiles

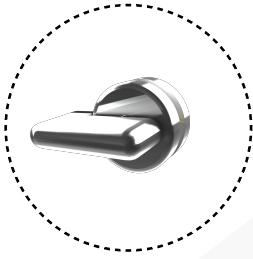

Indicator Lock

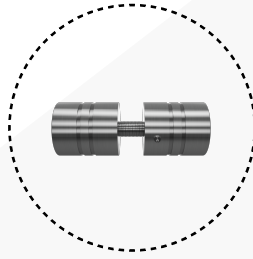

Door Knob

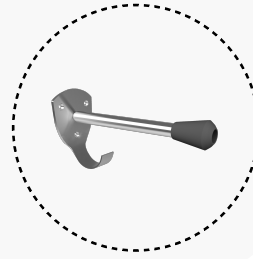

Coat Hook




Adjustable Leg




Hinge




Top Rail

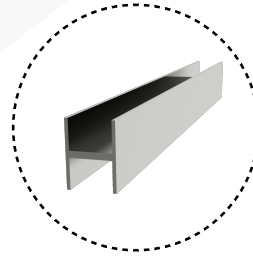


I-Profile

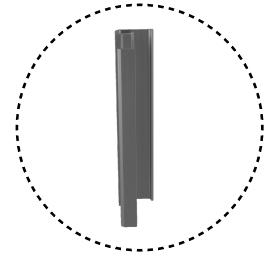

H-Profile

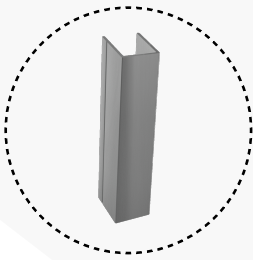


U-Profile

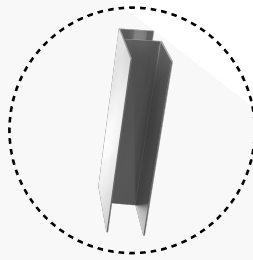

L-Profile

# Tools required



Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

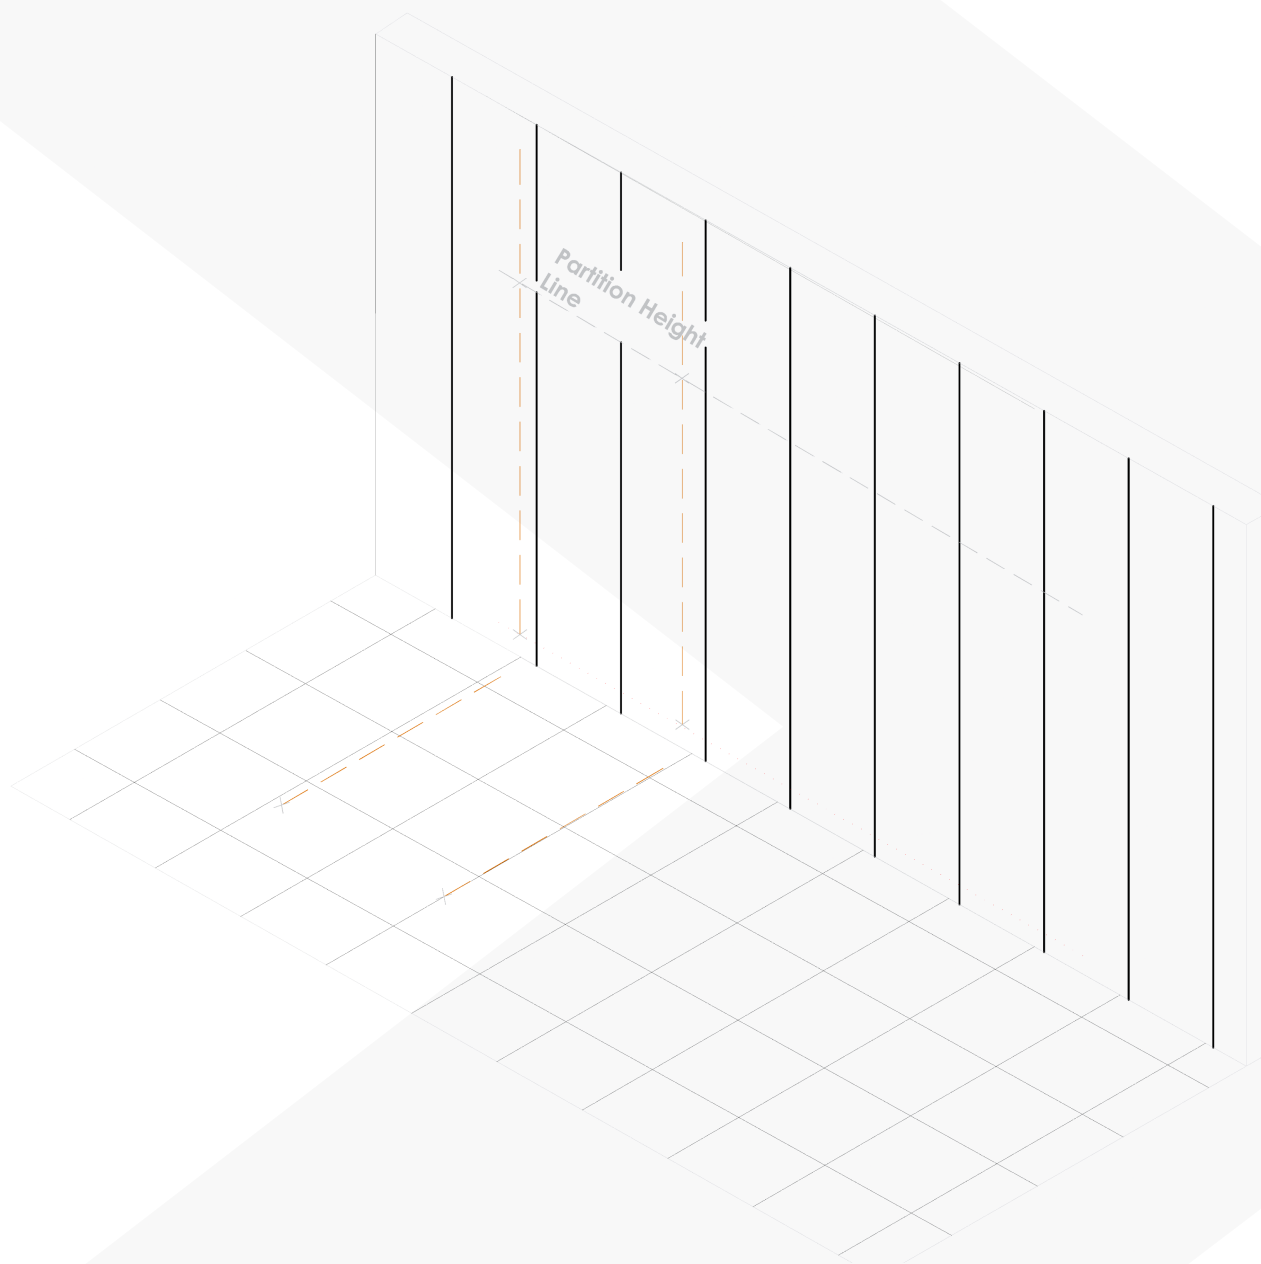


- Measure and mark a vertical line on the rear walls of divider partition positions.
- Then mark the wall equally to fix 1x U-Profile per divider partition. Please see dimensions above for U-profile position.

## Step 02

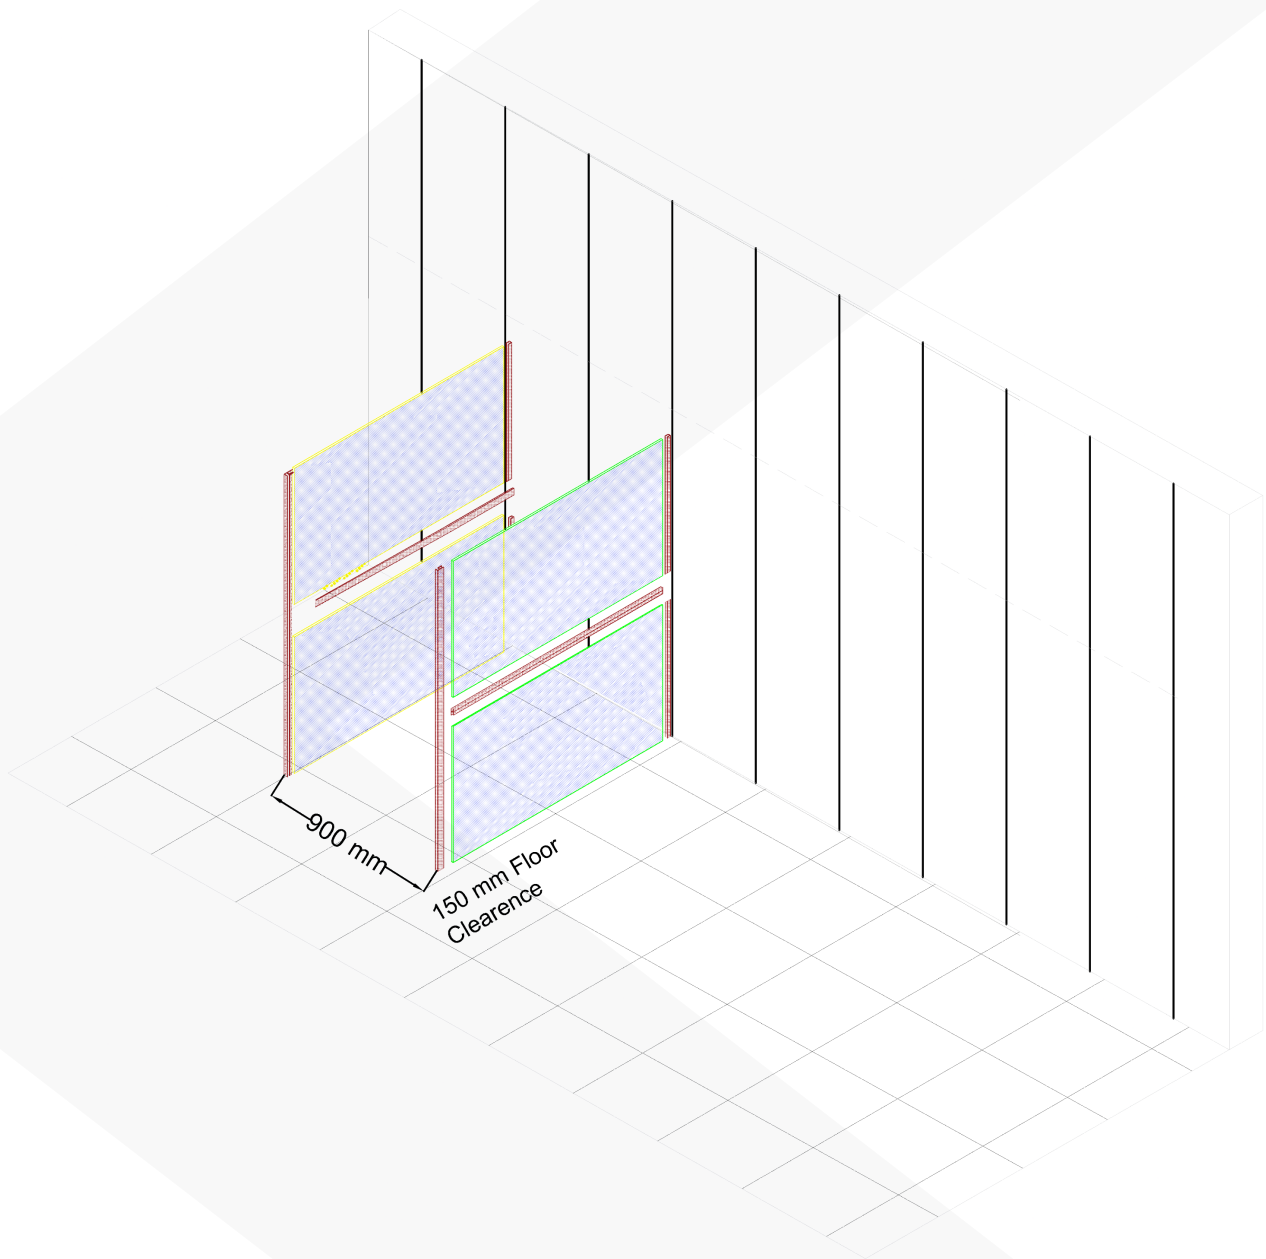


- Fix 2xU-Profile for each divider on the vertical line marked.
- Place the pilaster panel into the 1xU-profile on the side structural wall, securing the panel with fixings provided on both divider partition
- Insert the I-channel joining strip onto the pilaster panel.

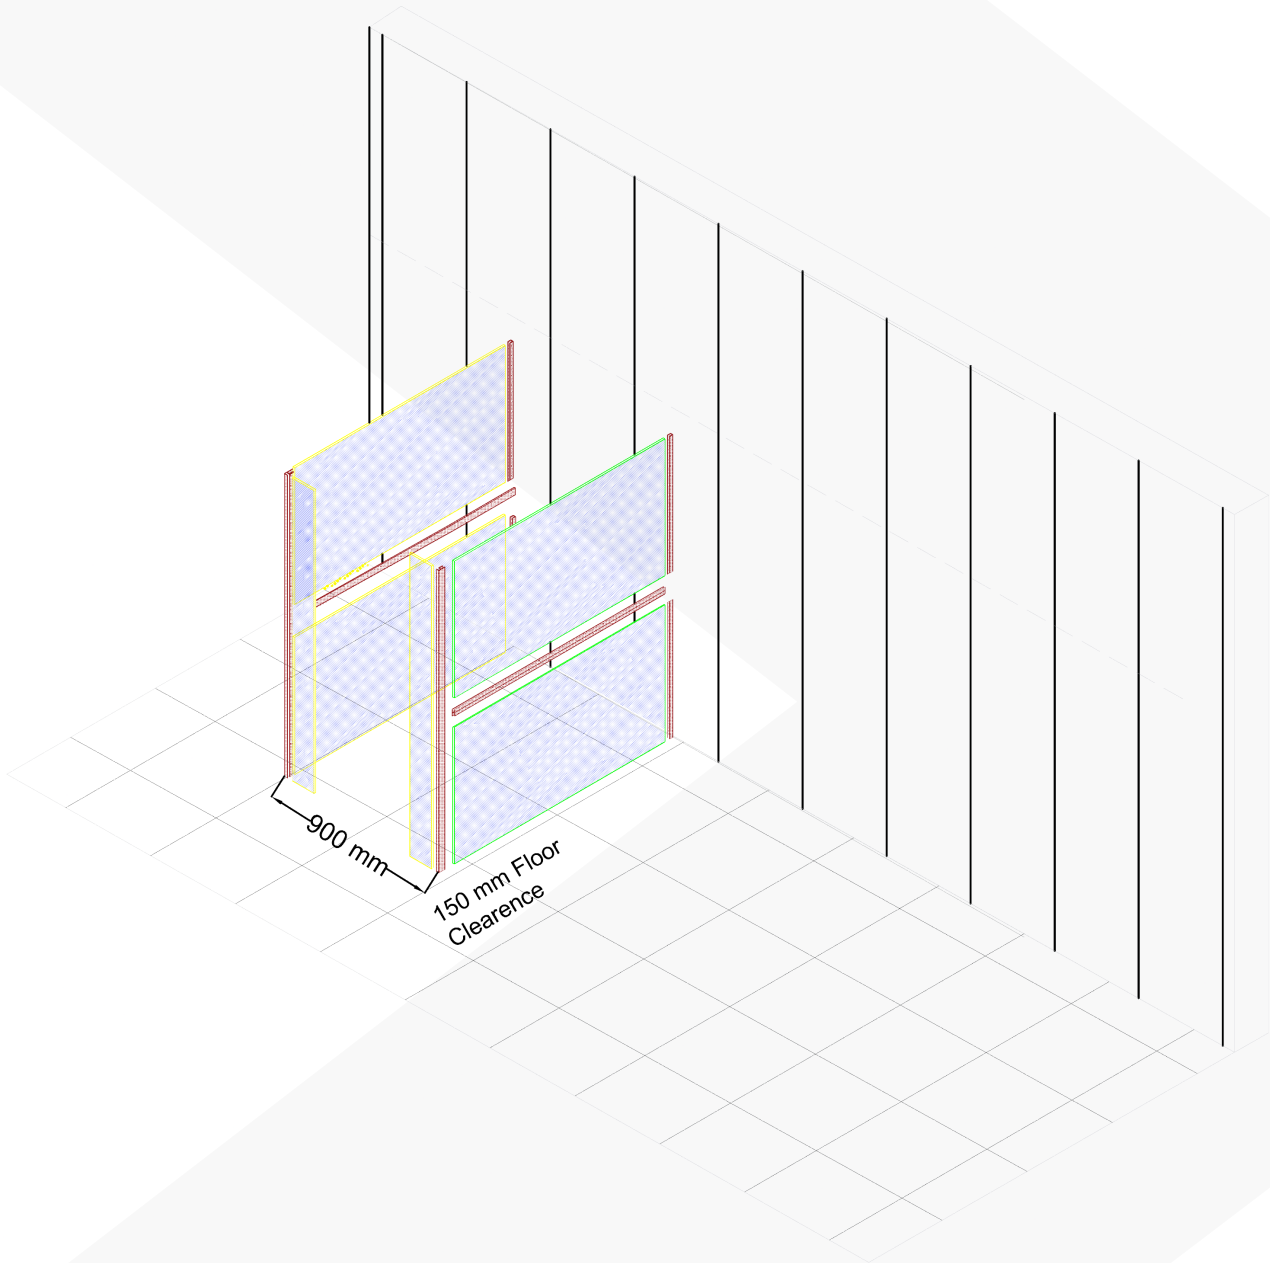


- Fix and secure wall pilaster into L-profile using the fitting provided.
- Fix L-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

## Step 04

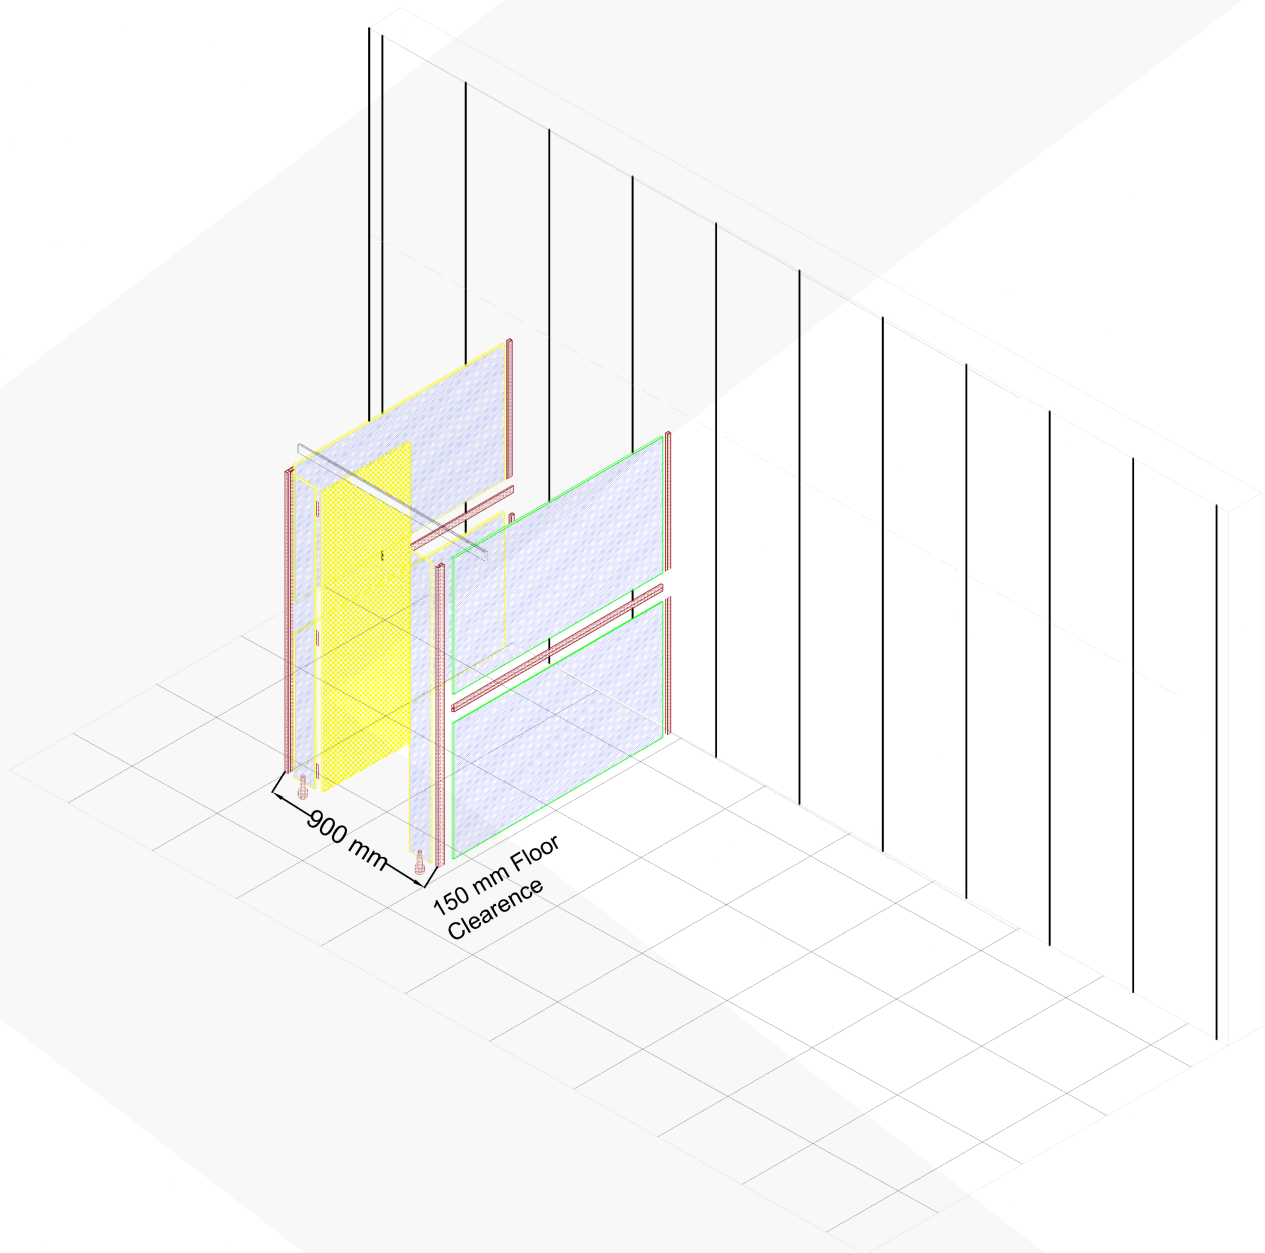

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.

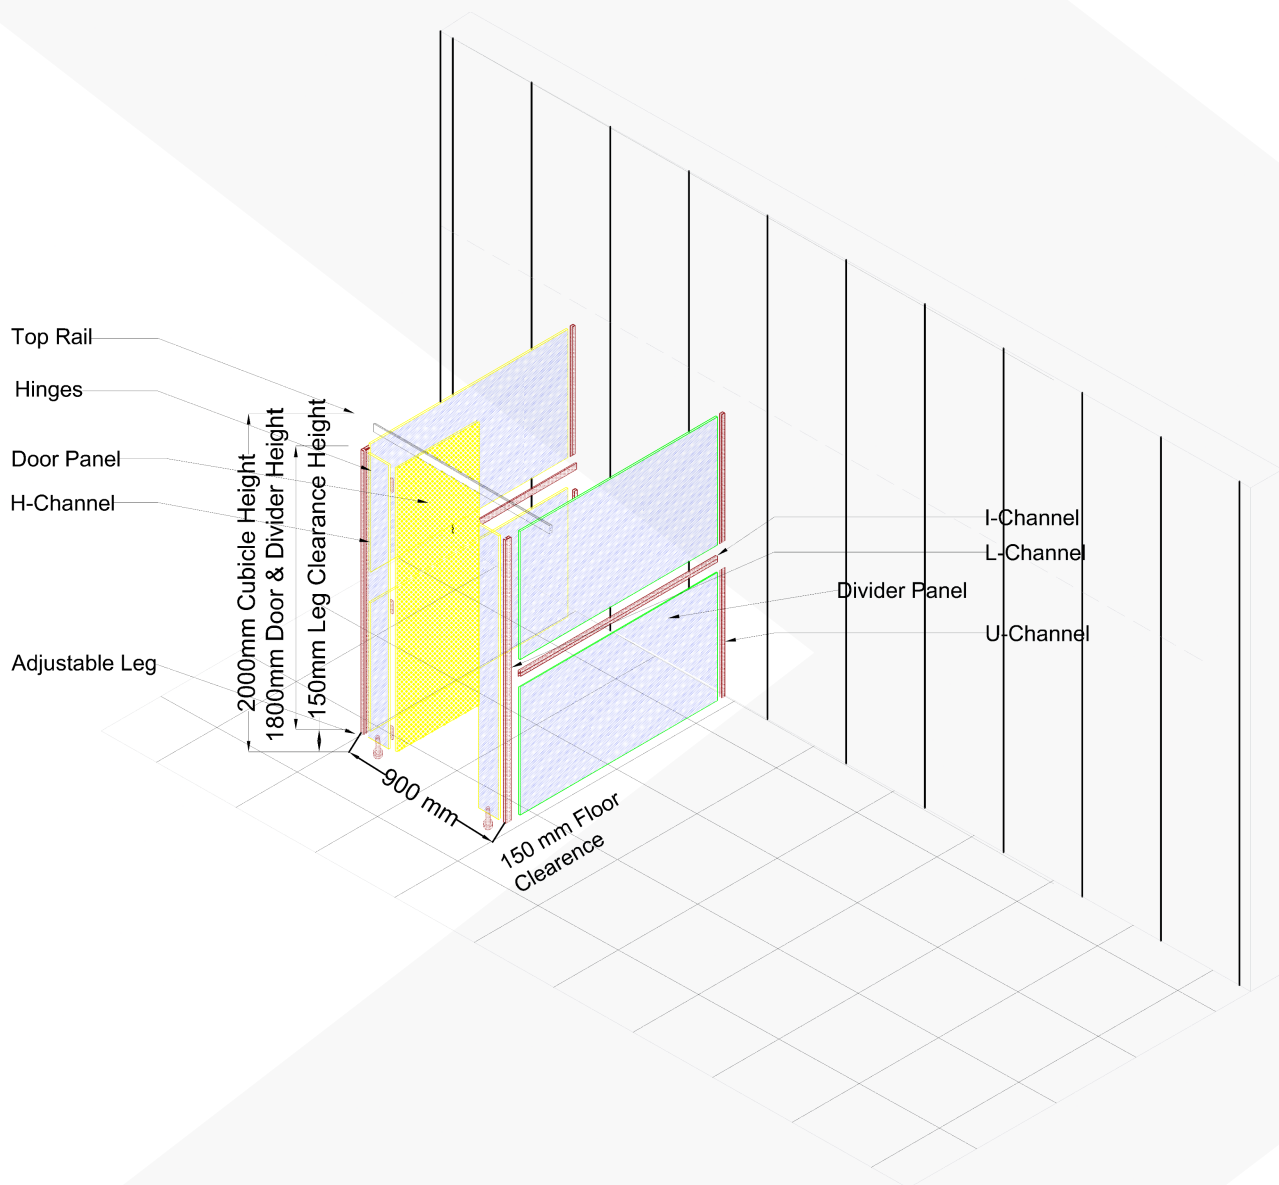

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



This page intentionally left blank



Whatsapp Us



Expert Support

# CUBICLE XPRESS

Delivery at the Speed of Business....

QR Code for download page



Cubiclexpress.com

