

# Instruction Manual

---

CUBICLE 2 RIGHT

Please use this instruction manual to fix your  
DIY toilet cubicle delivered by Cubiclexpress




**CUBICLE  
XPRESS**

Delivery at the Speed of Business....


# What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 1 x Mid Pilaster (300 x 1800mm)
3. 2 x Door (600 x 1780mm)
4. 2 x Divider (1500 x 1800mm)
5. 4 x U Profile (1800mm)
6. 4 x H Profile (1800mm)
7. 1 x Top Rail (1800mm)
8. 1 x L Profile (1800mm)
9. 2 x I Profile (1500mm)
10. 4 x Support Legs
11. 6 x Hinges
12. 2 x Indicator Lock
13. 2 x Door Knob
14. 2 x Coat Hook
15. 2 x Rubber Beading (1800mm)
16. Screws & Gittis


# Hardware and Profiles

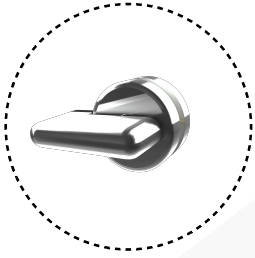

Indicator Lock

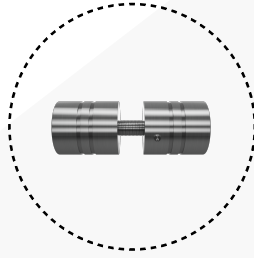

Door Knob

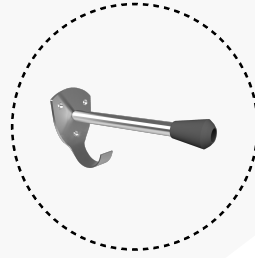

Coat Hook




Adjustable Leg




Hinge




Top Rail

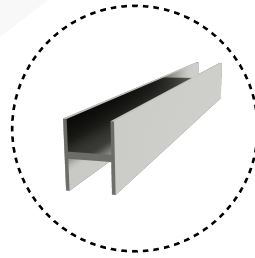


I-Profile

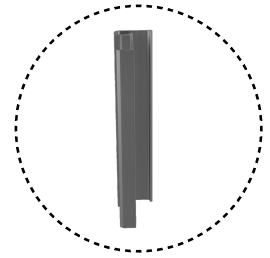

H-Profile

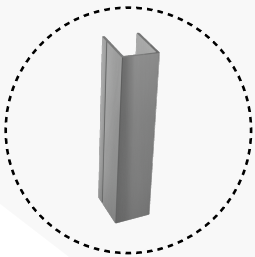


U-Profile

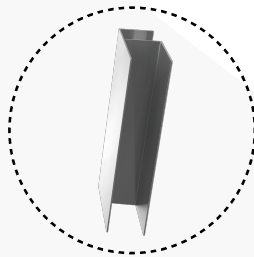

L-Profile

## Tools required




Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

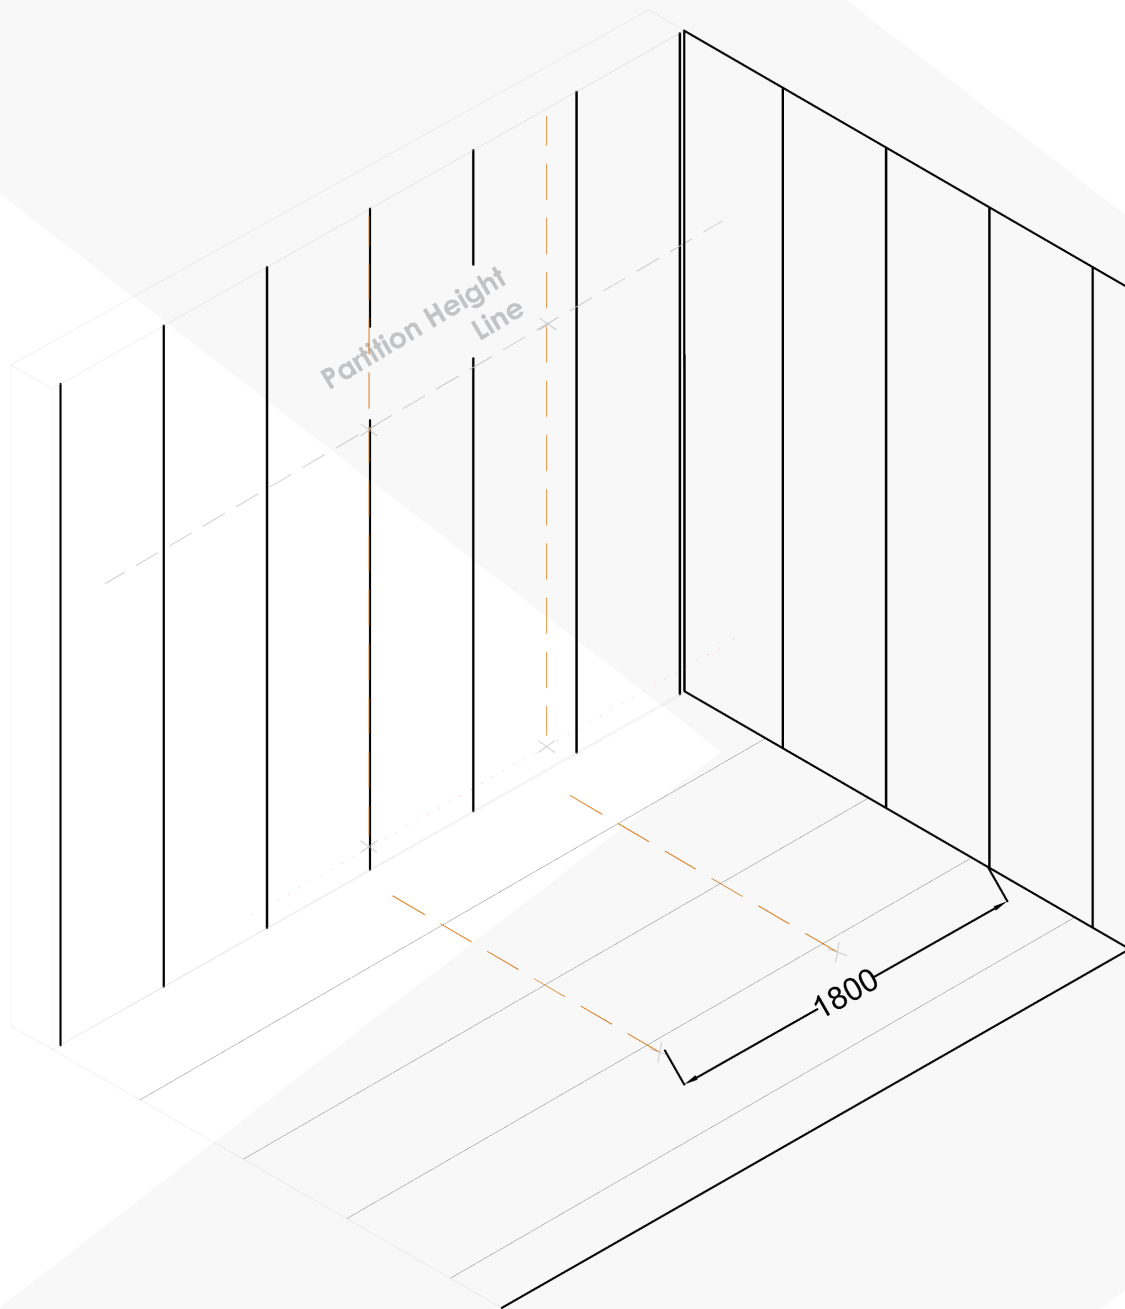


● Measure and mark a vertical line on the rear and right side wall of the partition and pilaster positions.

● Then mark the wall equally to fix 1x U-Profile per partition and end pilasters. Please see dimensions above for U-profile position.

## Step 02

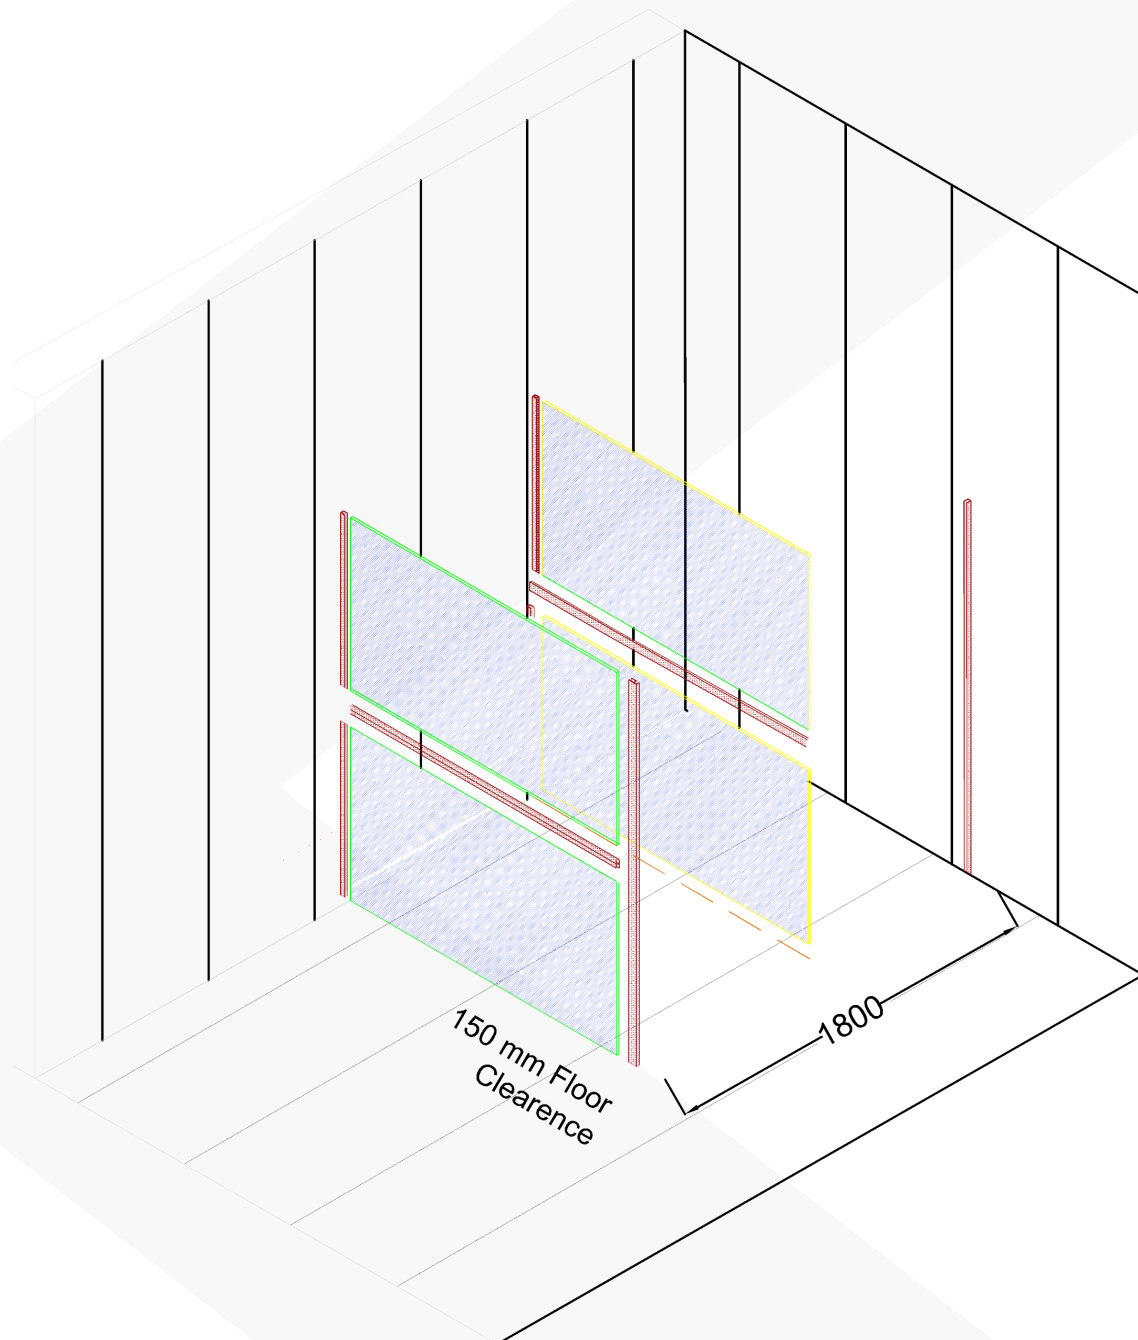


- Fix 1xU-Profile for each partition and pilaster on the vertical line marked.
- Cut the partition panels to size if required in depth.
- Place the bottom partition panel into the 1xU-profile on the back structural wall, securing the panel with fixings provided.
- Insert the I-channel joining strip onto the bottom partition panel

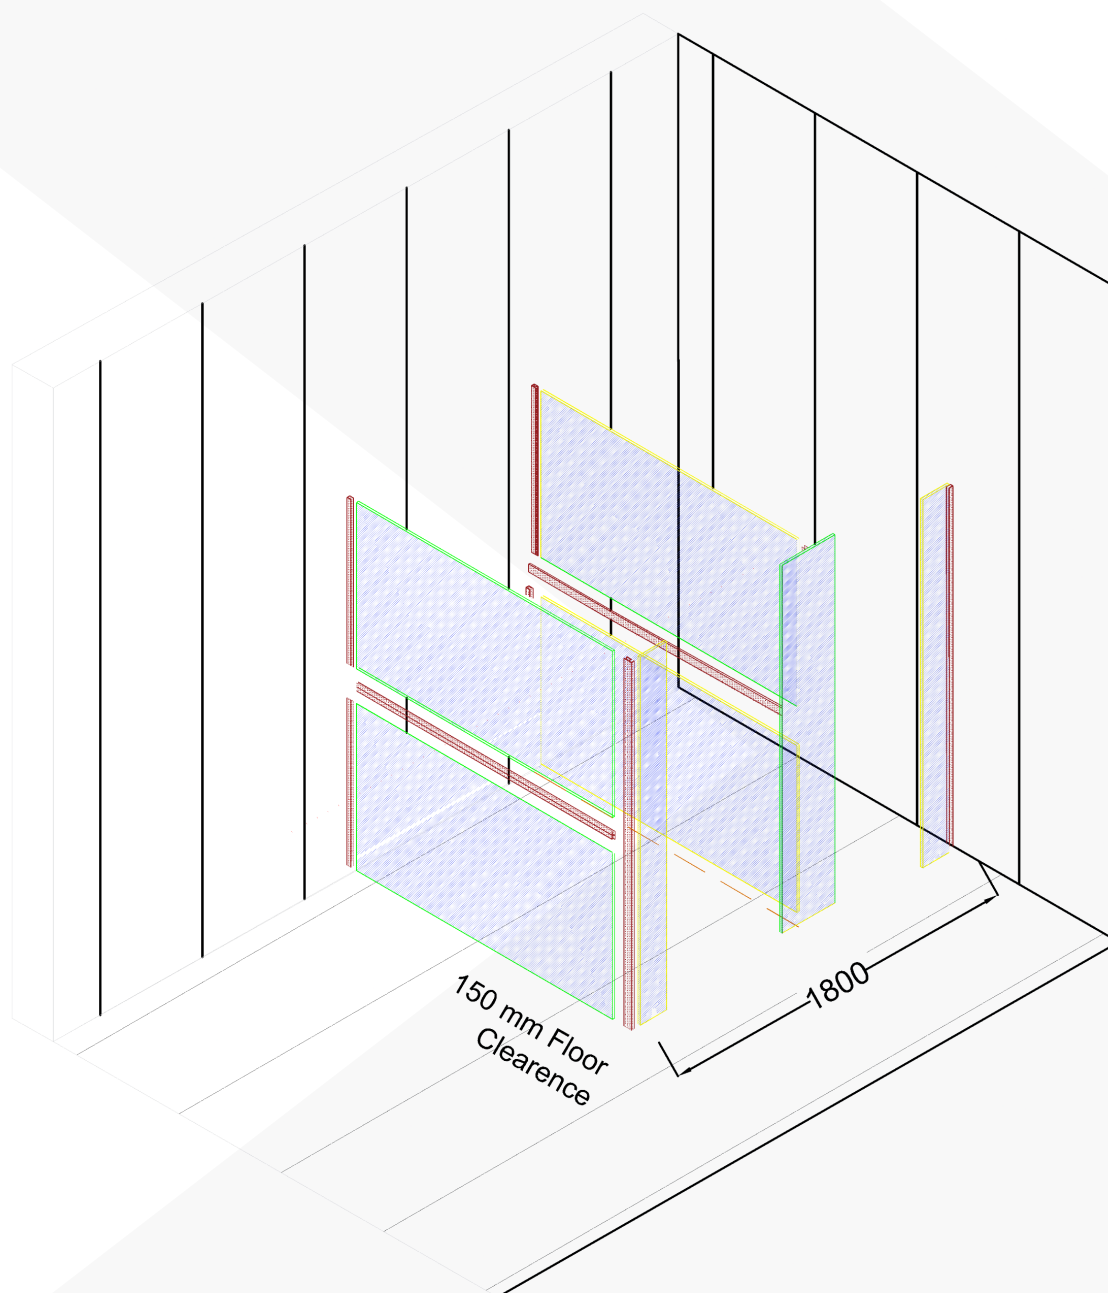


- Fix and secure wall pilaster into U-profile using the fitting provided.
- Fix U-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

## Step 04

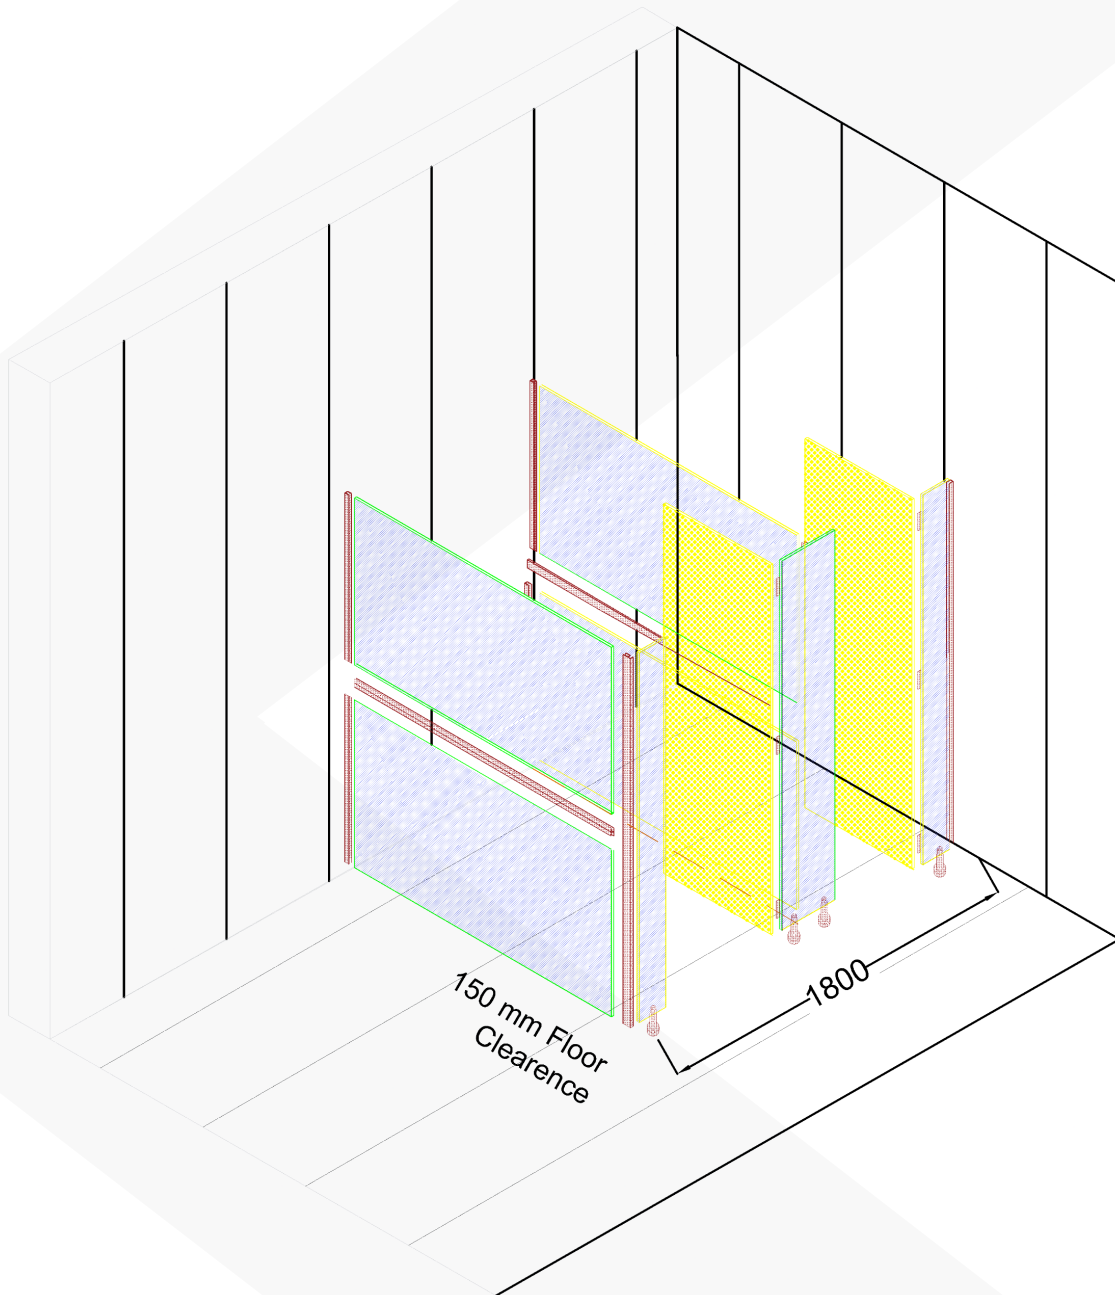


- Fix and secure mid pilasters into the U-profile using the fitting provided.
- Fix 1xL-profile to the end divider(s) and end pilaster(s) for the corner cubicle.

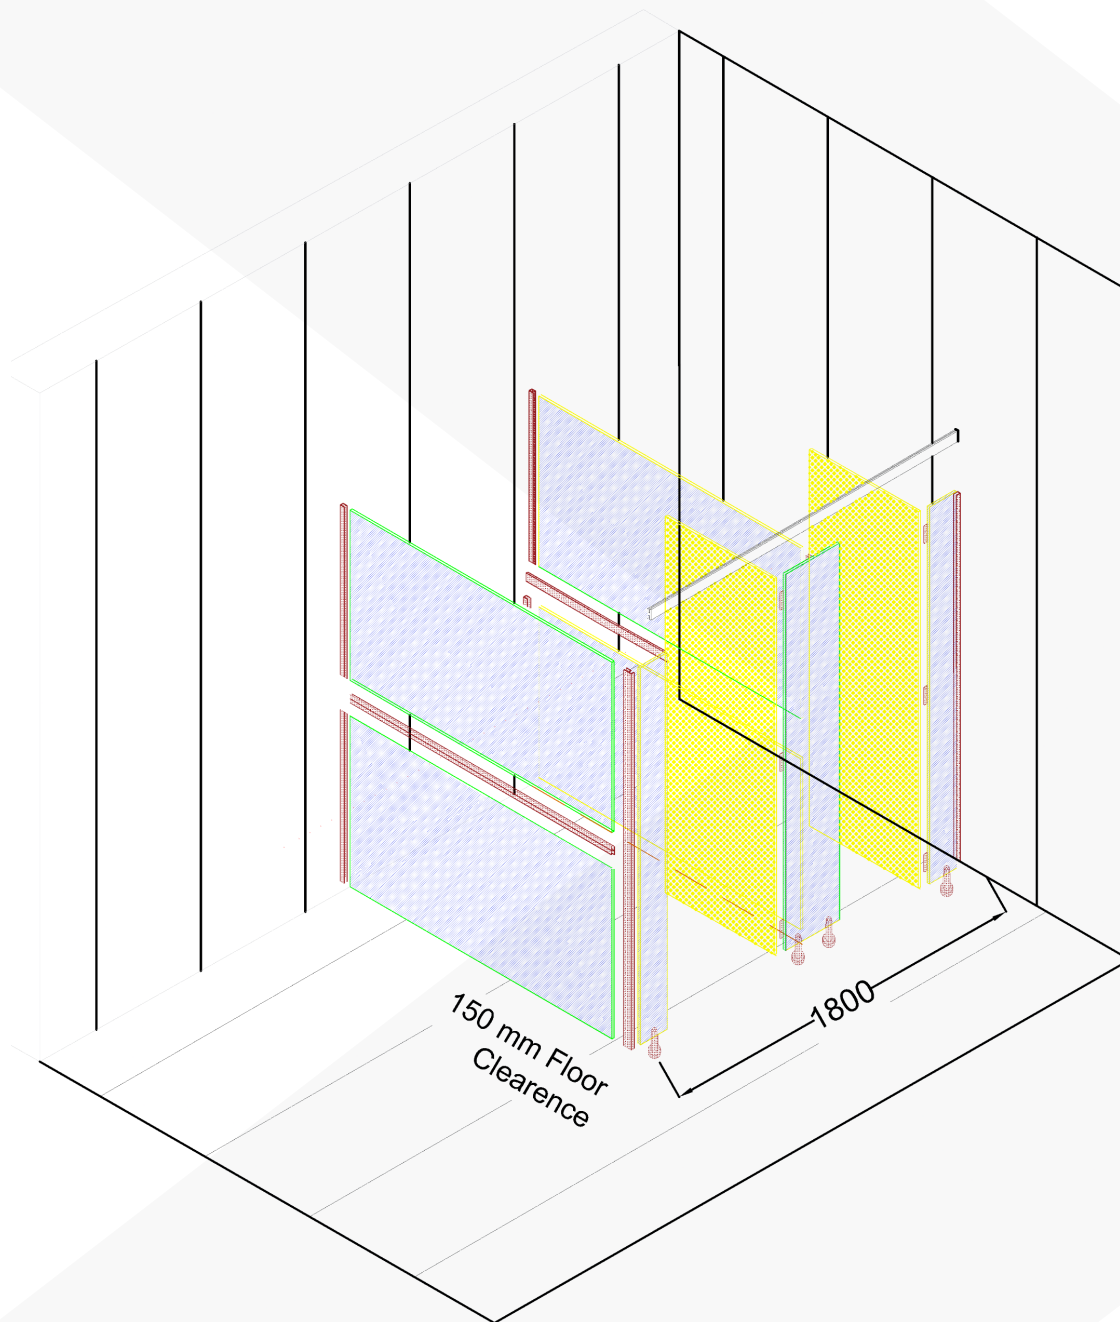

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.



# Step 06

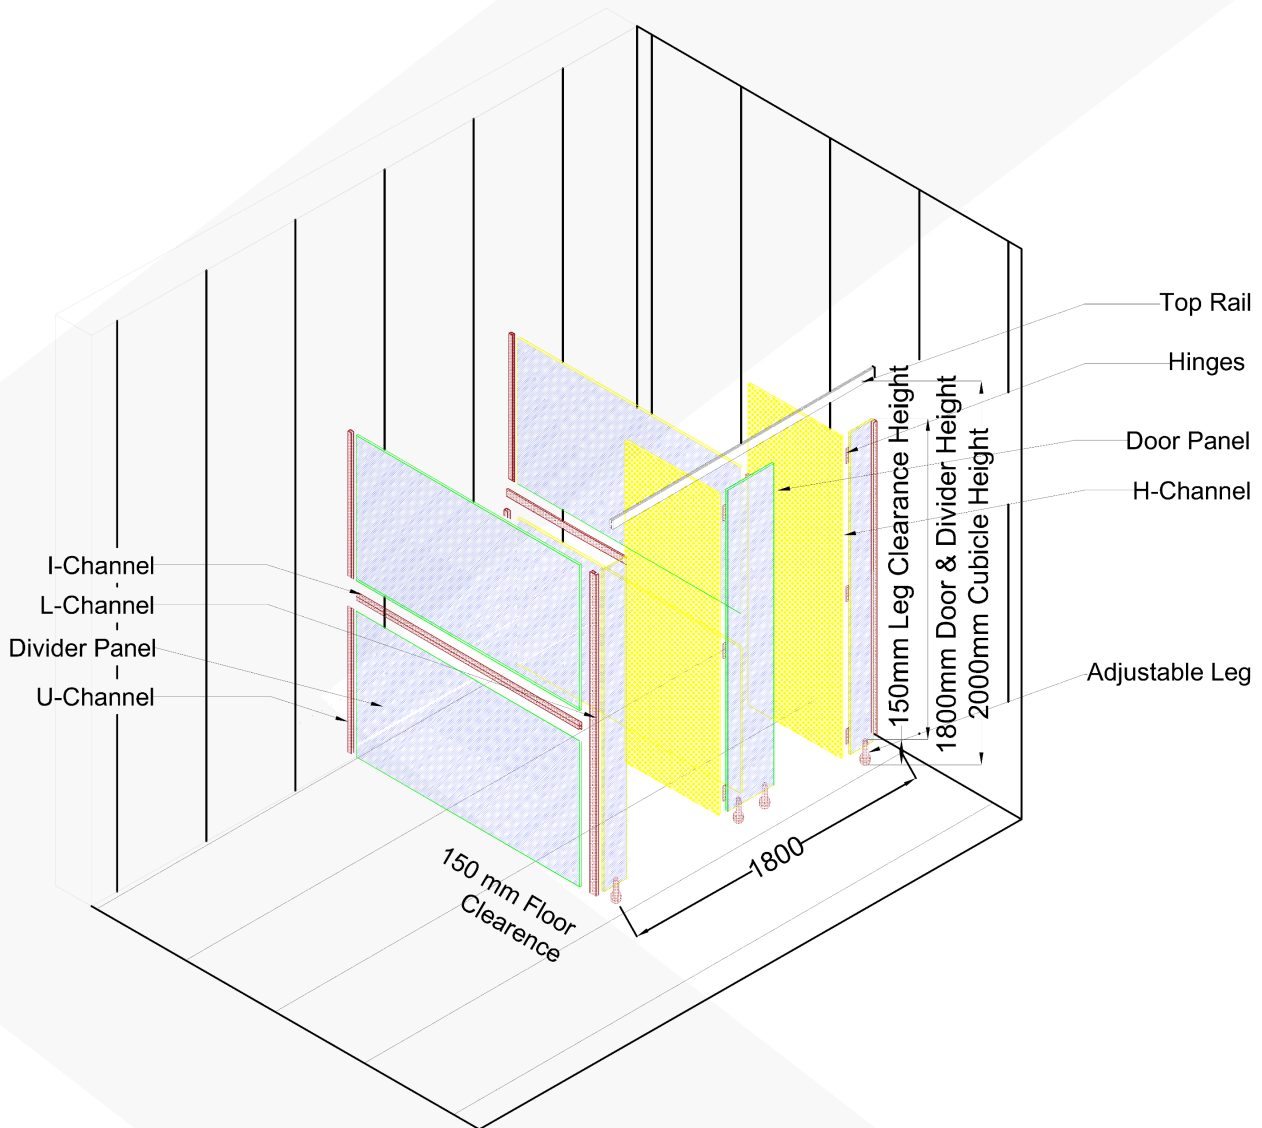

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support

# CUBICLE XPRESS

Delivery at the Speed of Business....

QR Code for download page



Cubiclexpress.com

