

Instruction Manual

CUBICLE 4 CLOSED

Please use this instruction manual to fix your DIY toilet cubicle delivered by Cubiclexpress.




**CUBICLE
XPRESS**

Delivery at the Speed of Business....


What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 3 x Mid Pilaster (300 x 1800mm)
3. 4 x Door (600 x 1780mm)
4. 3 x Divider (1500 x 1800mm)
5. 8 x U Profile (1800mm)
6. 8 x H Profile (1800mm)
7. 1 x Top Rail (3600mm)
8. 3 x I Profile (1500mm)
9. 8 x Support Legs
10. 12 x Hinges
11. 4 x Indicator Lock
12. 4 x Door Knob
13. 4 x Coat Hook
14. 4 x Rubber Beading (1800mm)
15. Screws & Gittis


Hardware and Profiles

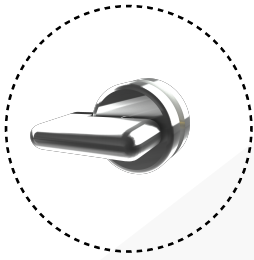

Indicator Lock

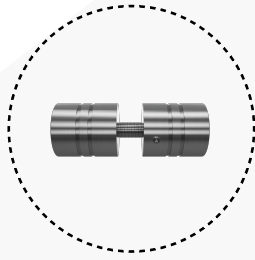

Door Knob

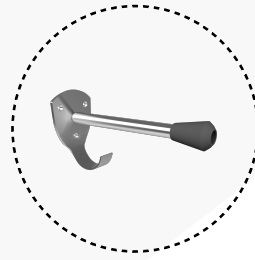

Coat Hook




Adjustable Leg




Hinge




Top Rail

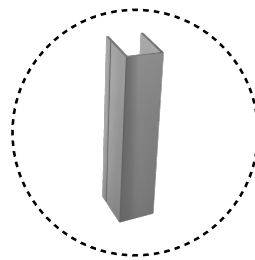

U-Profile

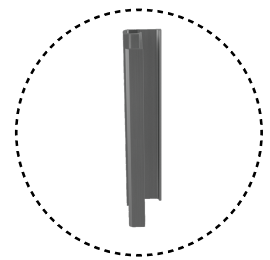


H-Profile

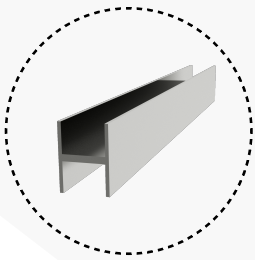

I-Profile

Tools required



Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

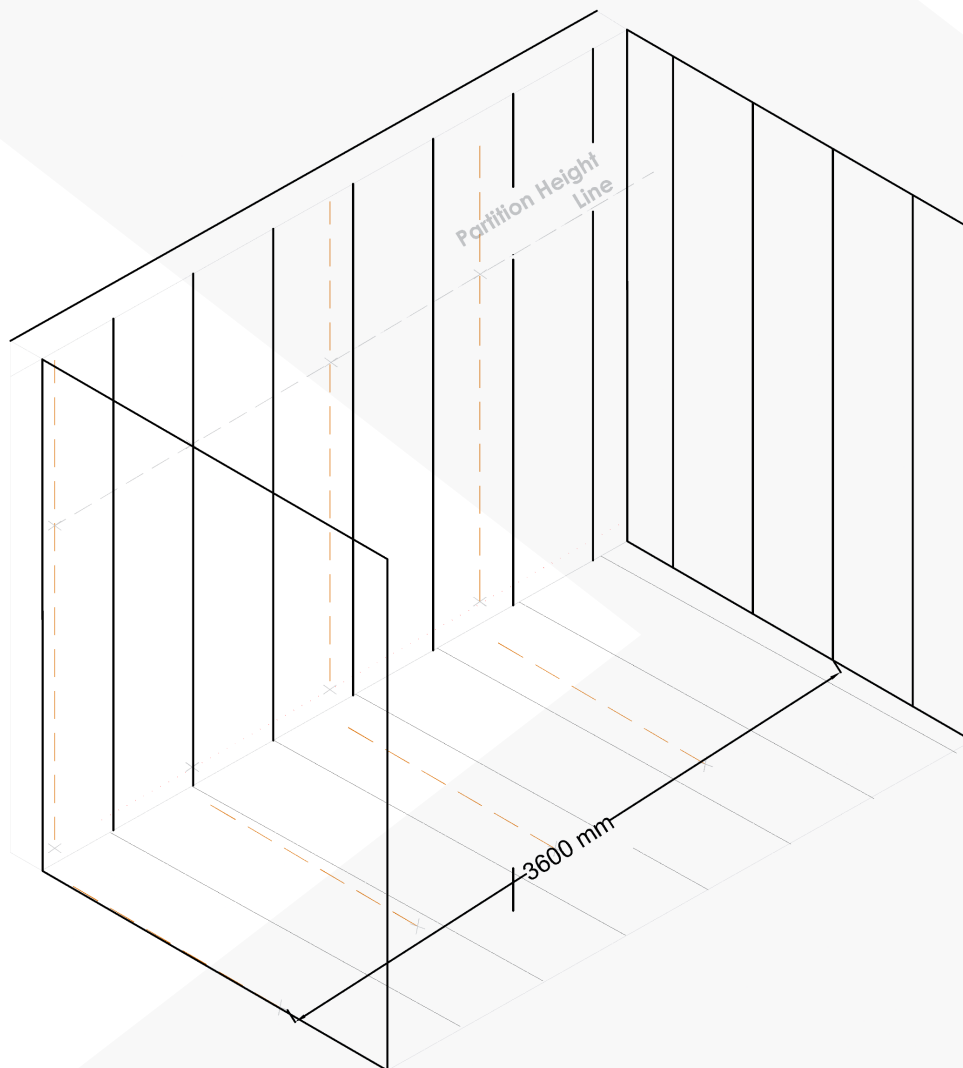


- Measure and mark a vertical line on the side walls of end partition positions.
- Then mark the wall equally to fix 1x U-Profile per end wall pilasters. Please see dimensions above for U-profile position.

Step 02

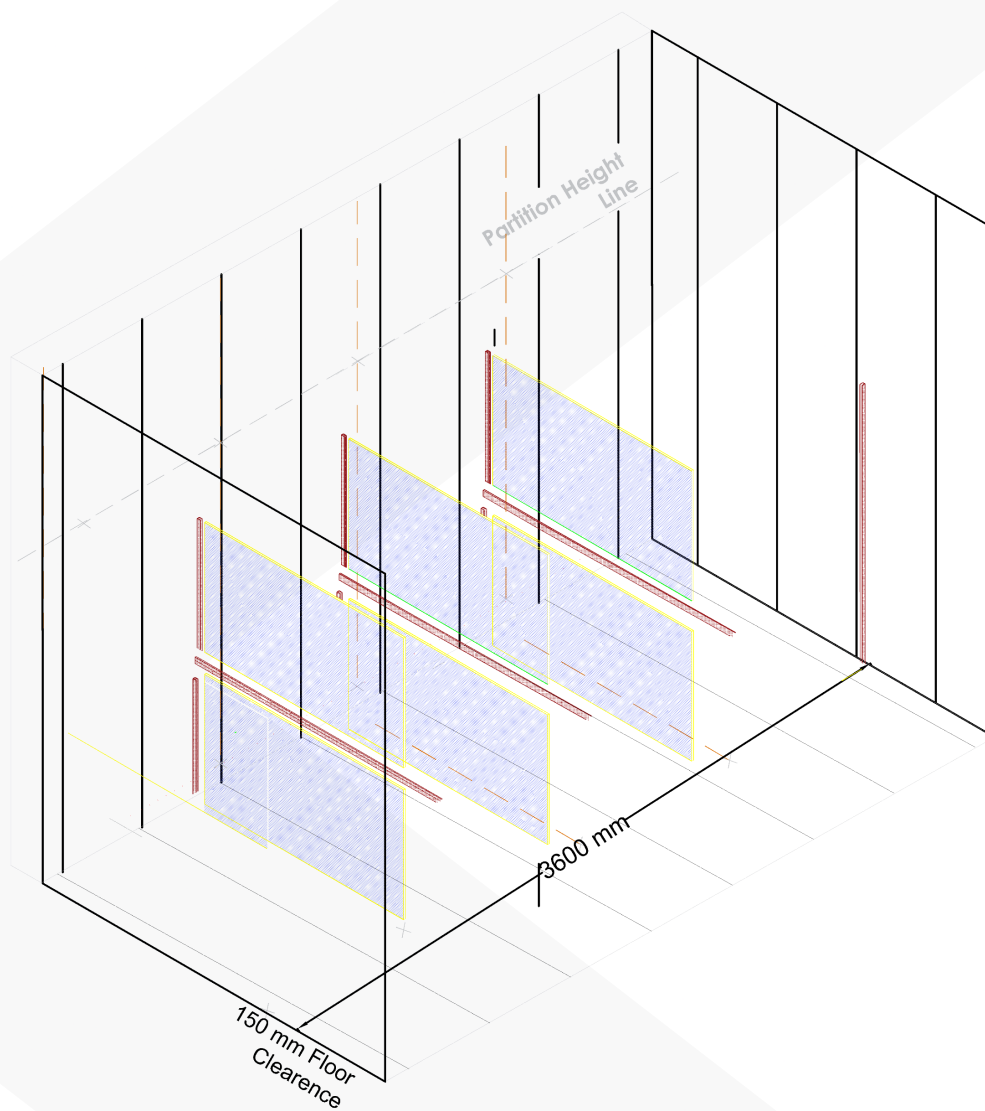


- Fix 1xU-Profile for each pilaster on the vertical line marked.
- Place the pilaster panel into the 1xU-profile on the side structural wall, securing the panel with fixings provided.
- Insert the H-channel joining strip onto the pilaster panel.

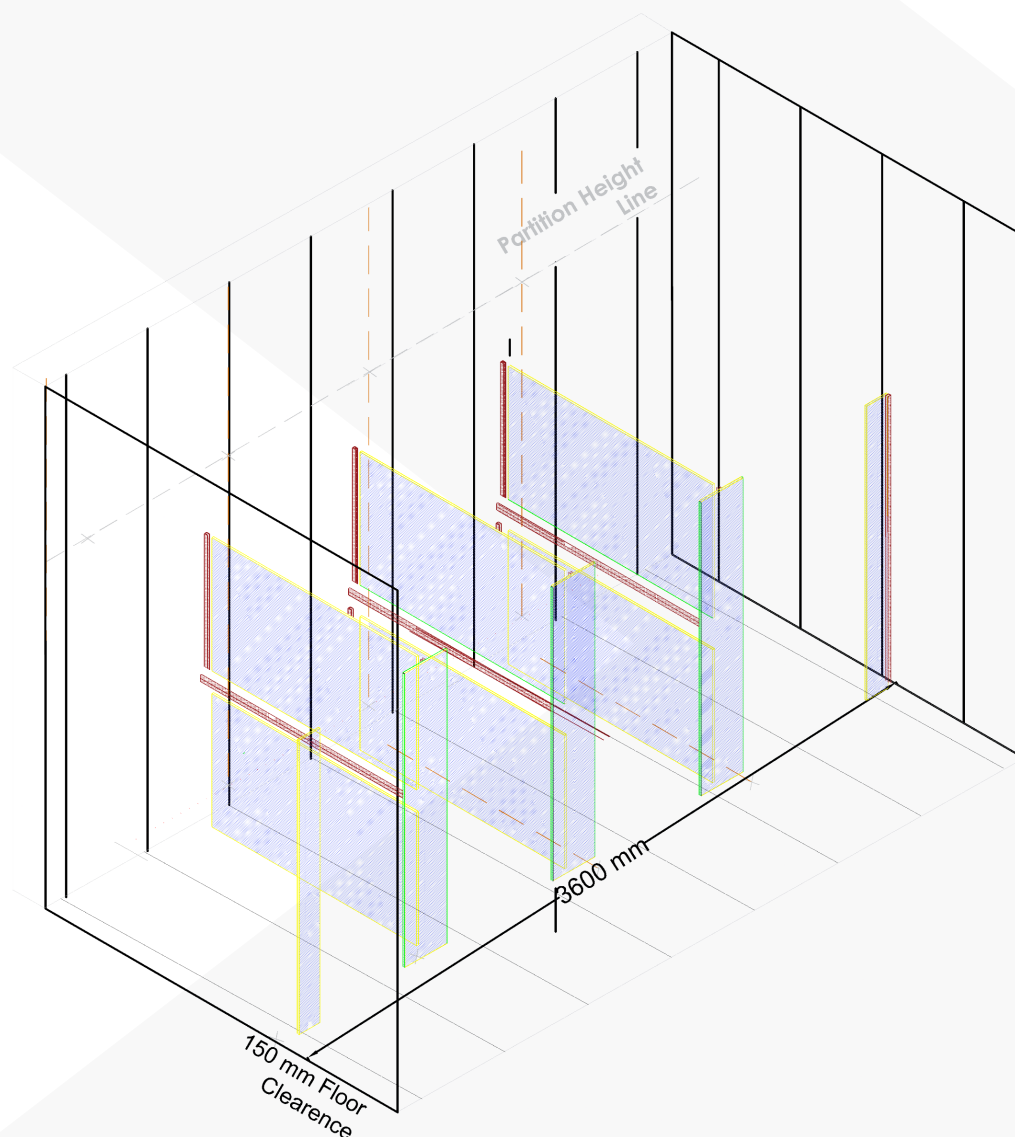


- Fix and secure wall pilaster into U-profile using the fitting provided.
- Fix U-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

Step 04

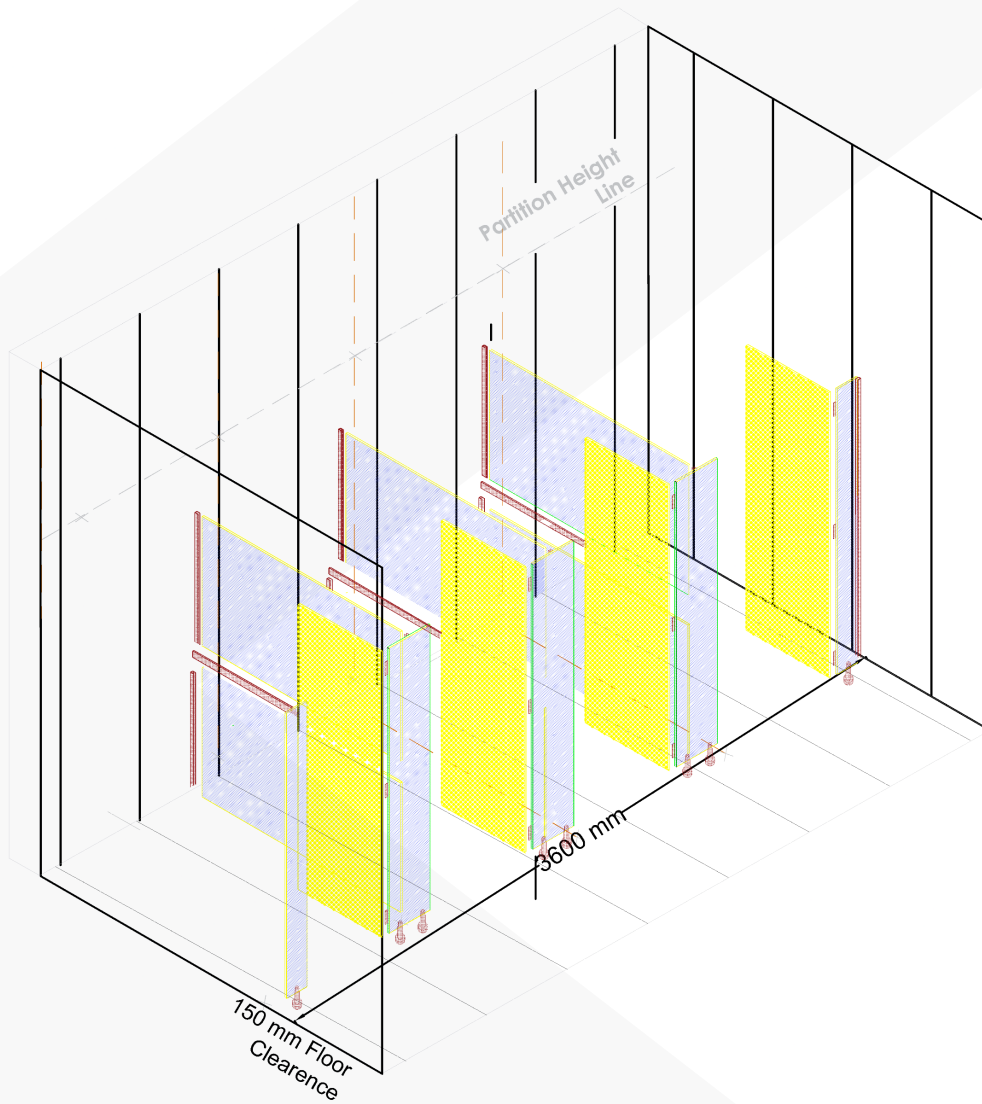


- Fix and secure mid pilasters into the U-profile using the fitting provided.
- Fix 2x Legs to the mid pilaster(s), wind the support leg until panel is level, then drill and secure leg to the floor.

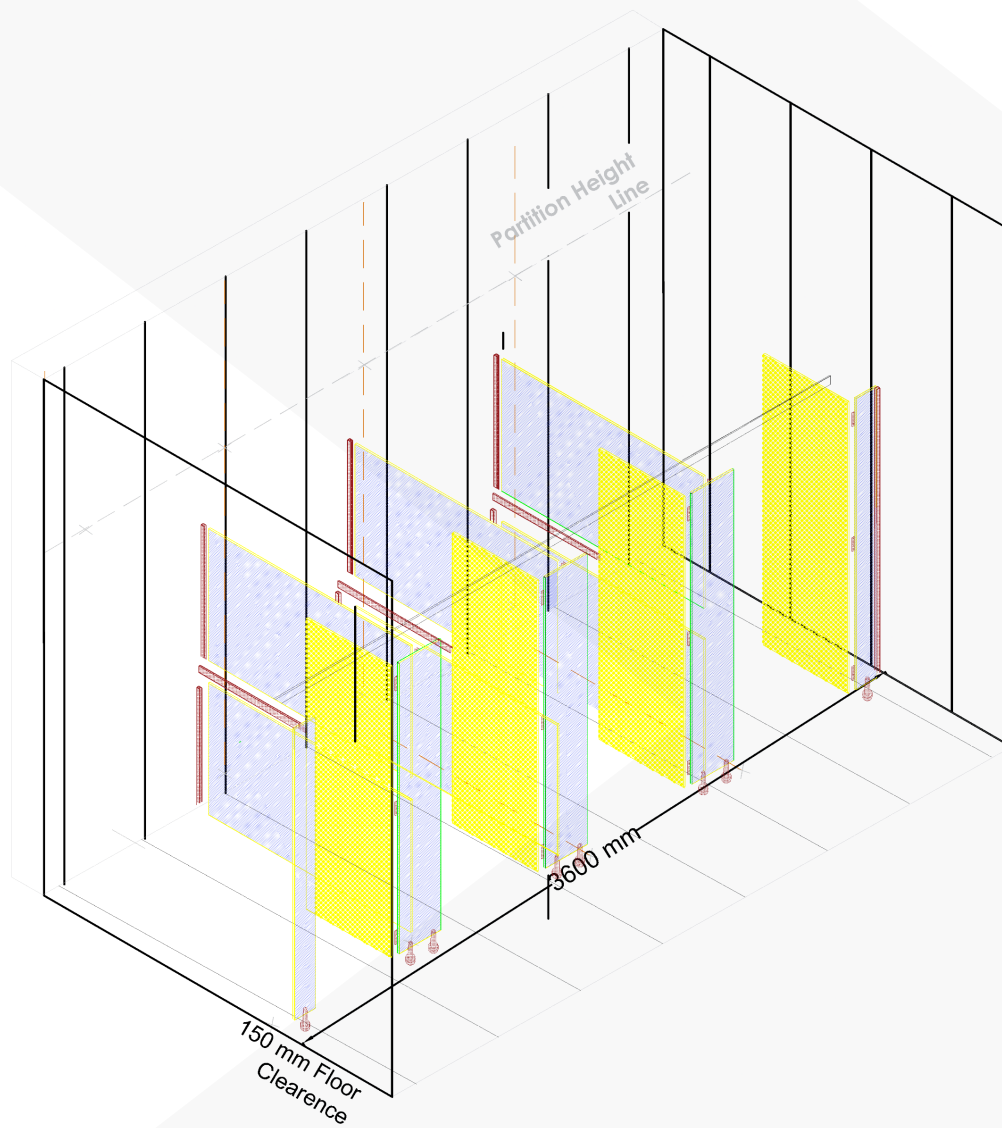

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.

Step 06

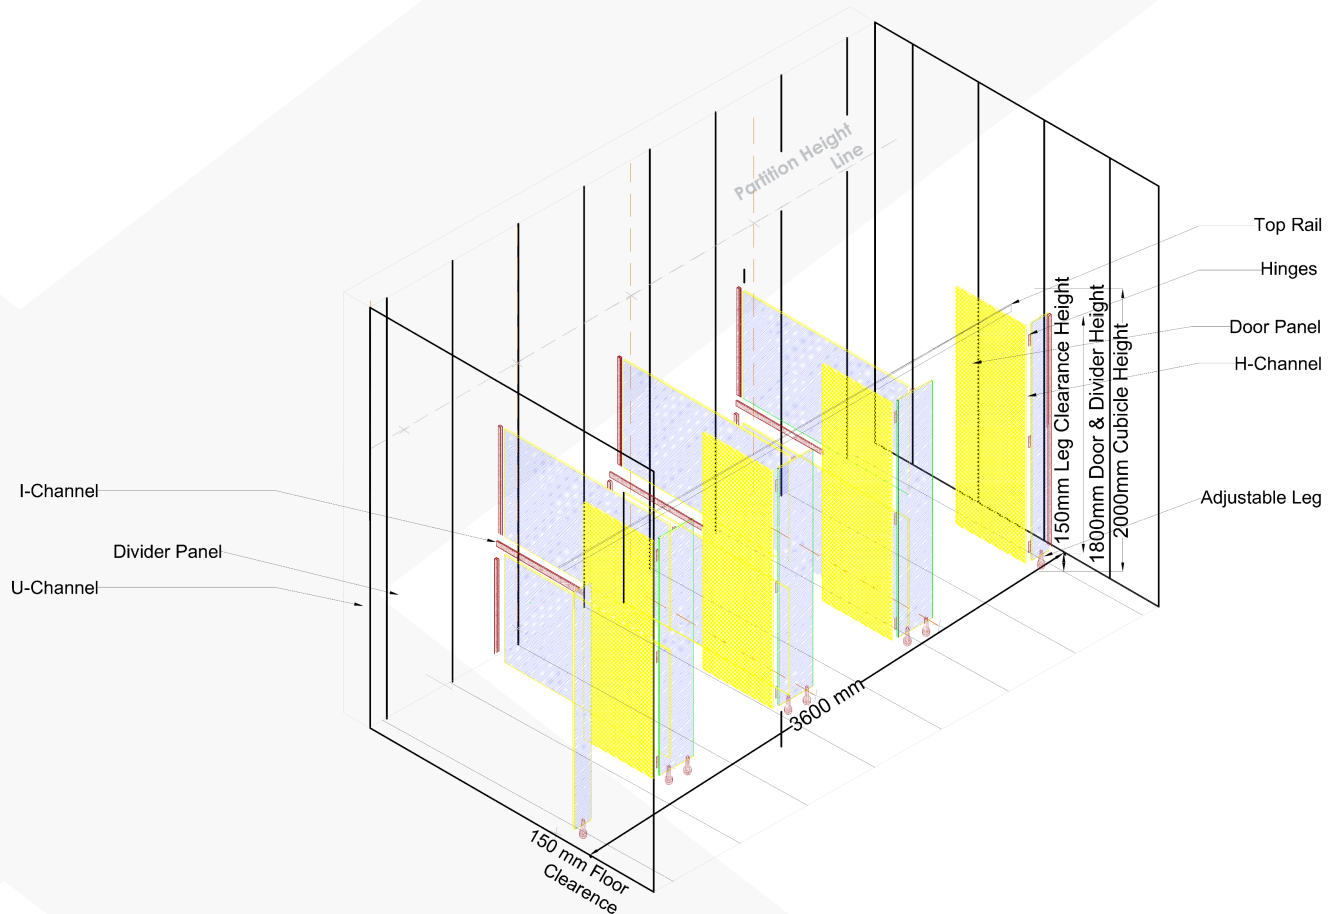

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support

CUBICLE XPRESS

Delivery at the Speed of Business....

QR Code for download page



Cubiclexpress.com

