

Instruction Manual

CUBICLE 5 OPEN

Please use this instruction manual to fix your
DIY toilet cubicle delivered by Cubiclexpress




**CUBICLE
XPRESS**

Delivery at the Speed of Business....


What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 4 x Mid Pilaster (300 x 1800mm)
3. 5 x Door (600 x 1780mm)
4. 6 x Divider (1500 x 1800mm)
5. 10 x U Profile (1800mm)
6. 10 x H Profile (1800mm)
7. 1 x Top Rail (3600mm)
8. 1 x Top rail (900mm)
9. 2 x L Profile (1800mm)
10. 6 x I Profile (1500mm)
11. 10 x Support Legs
12. 15 x Hinges
13. 5 x Indicator Lock
14. 5 x Door Knob
15. 5 x Coat Hook
16. 5 x Rubber Beading (1800mm)
17. Screws & Gittis.


Hardware and Profiles

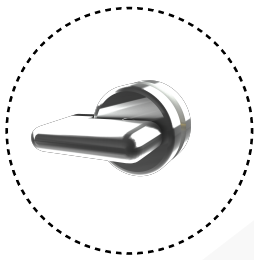

Indicator Lock

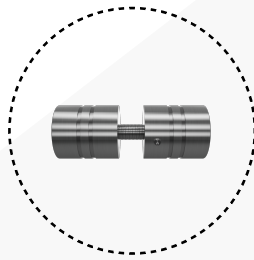

Door Knob

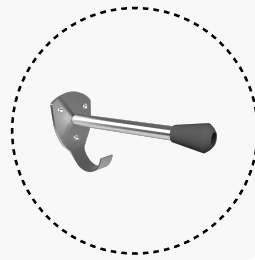

Coat Hook




Adjustable Leg




Hinge




Top Rail

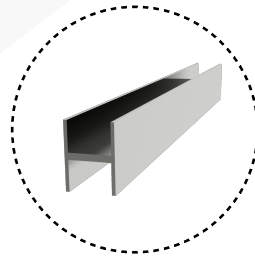


I-Profile

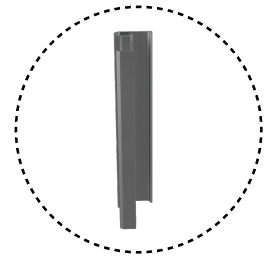

H-Profile

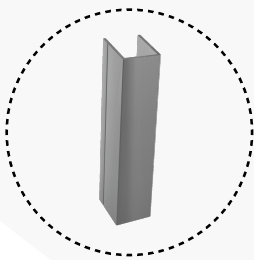


U-Profile

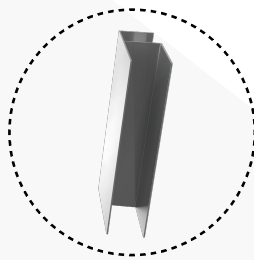

L-Profile

Tools required




Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

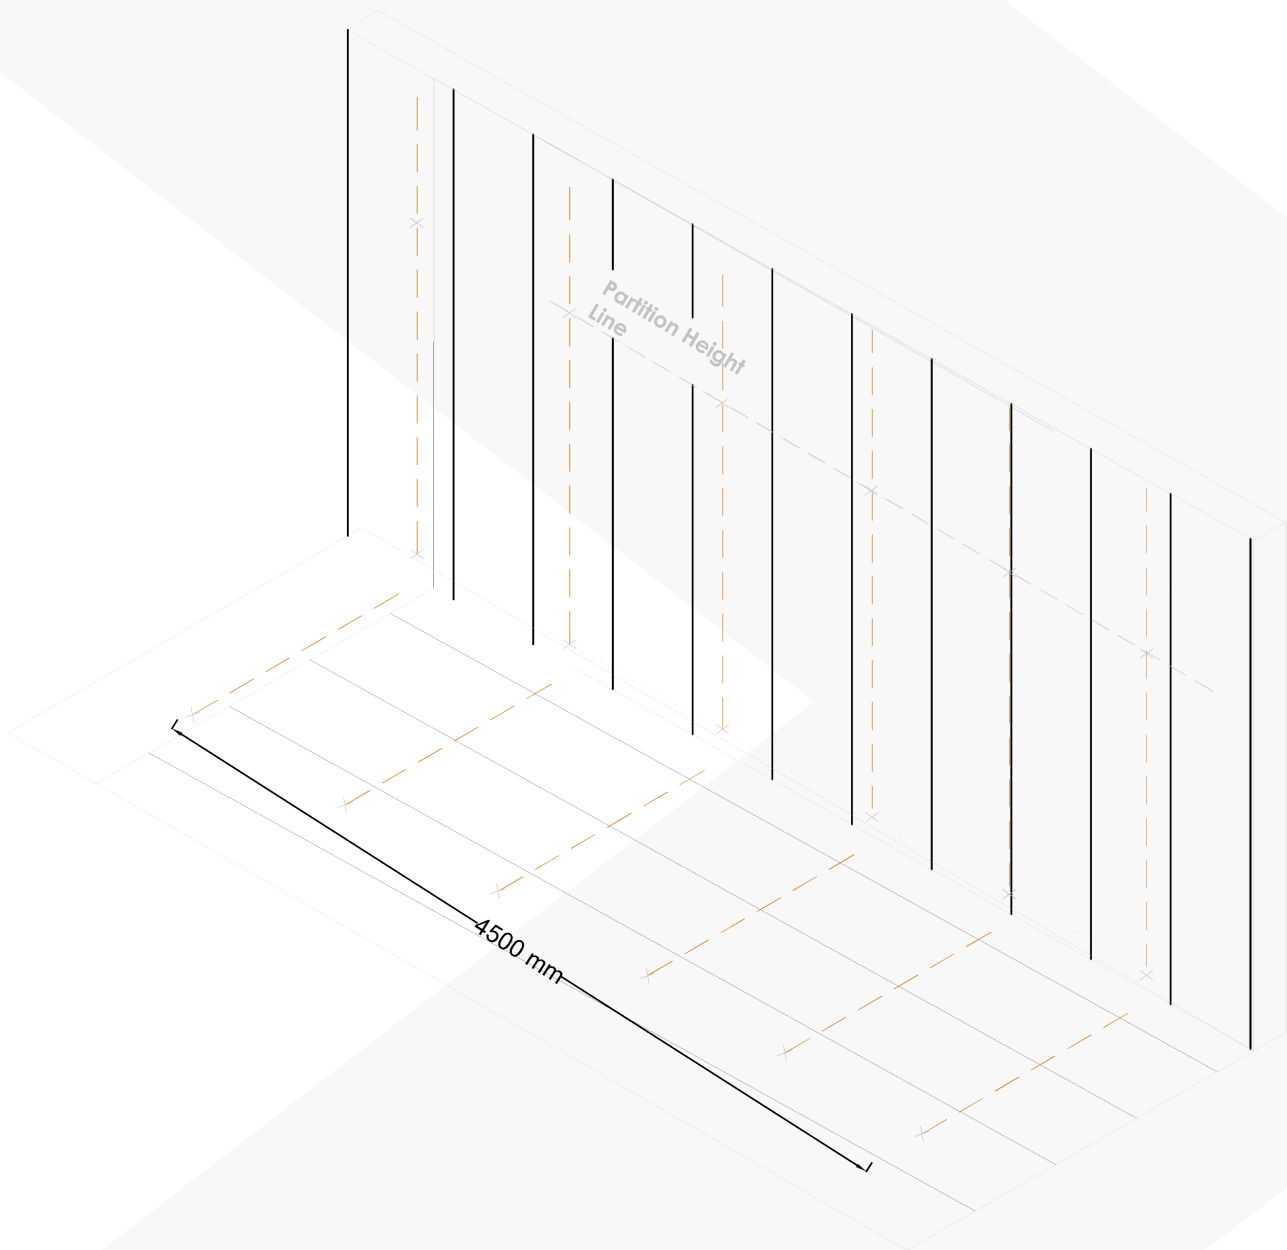


Measure and mark a vertical line on the rear walls of divider partition positions.

Then mark the wall equally to fix 1x U-Profile per divider partition. Please see dimensions above for U-profile position.

Step 02

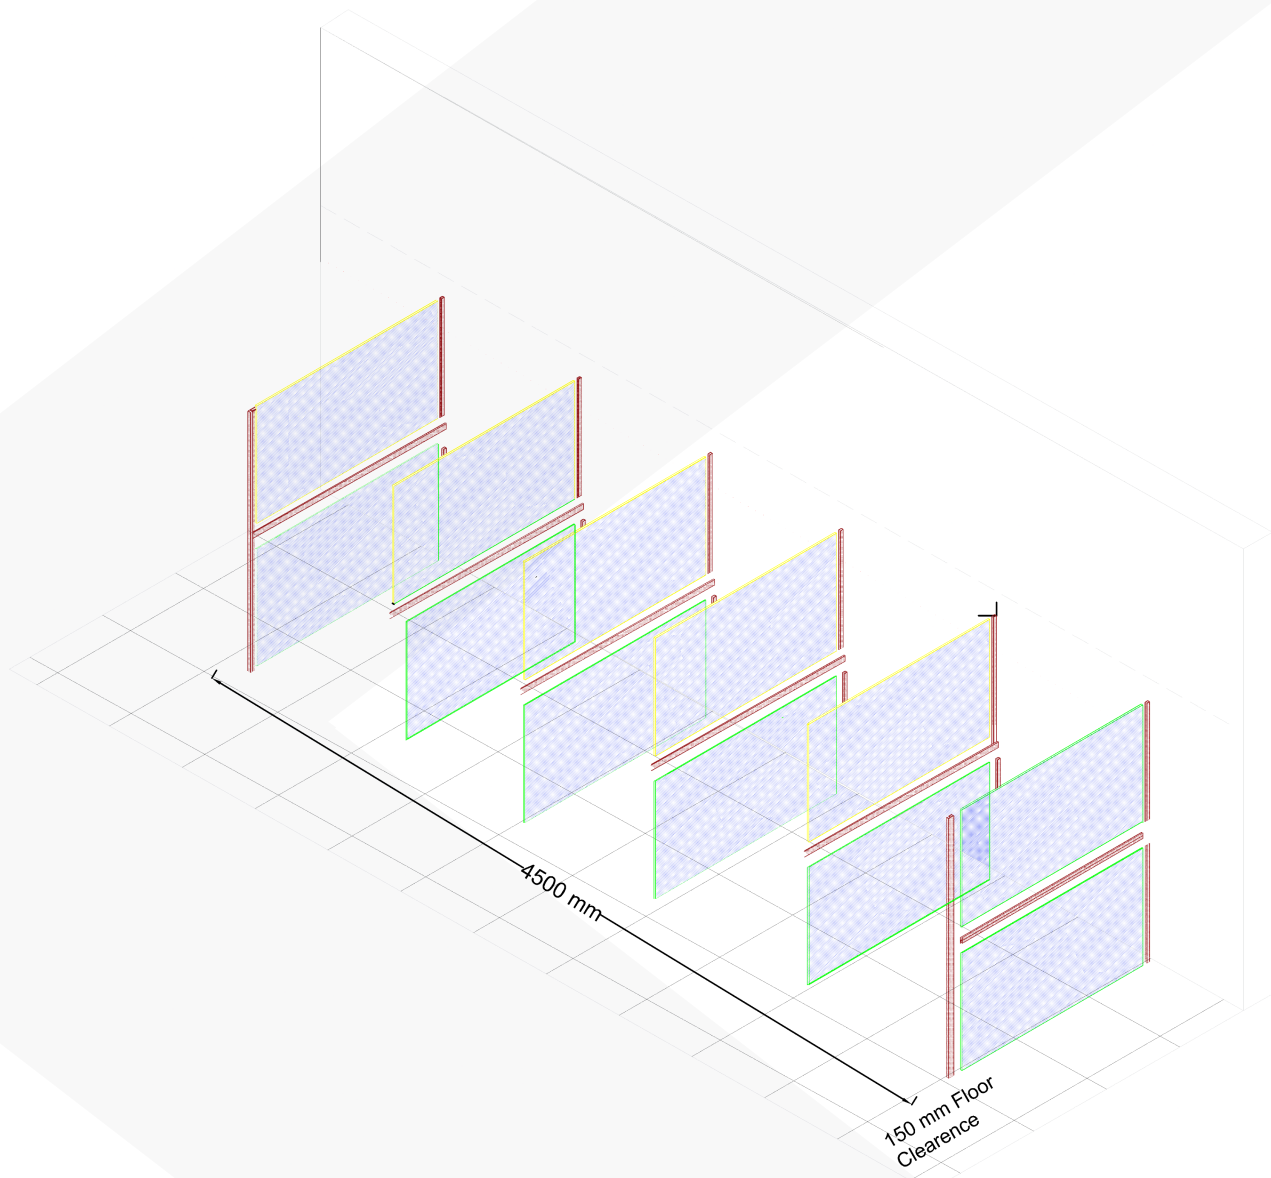


- Fix 2xU-Profile for each divider on the vertical line marked.
- Place the pilaster panel into the 1xU-profile on the side structural wall, securing the panel with fixings provided on both divider partition
- Insert the I-channel joining strip onto the pilaster panel.

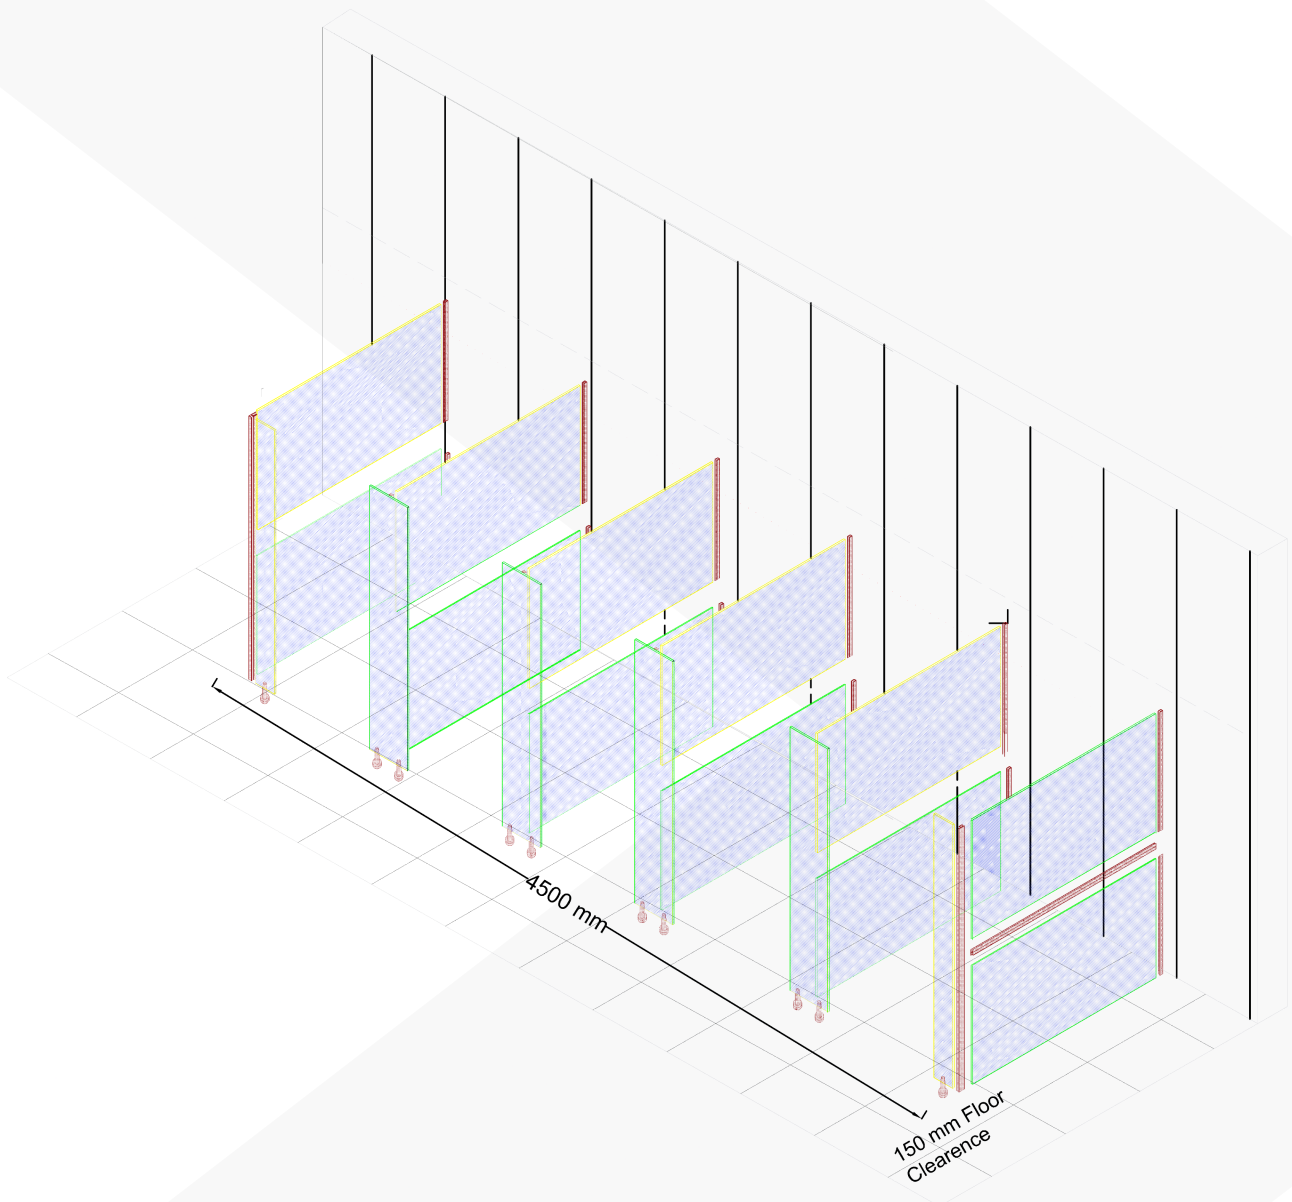


- Fix and secure wall pilaster into L-profile using the fitting provided.
- Fix L-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

Step 04

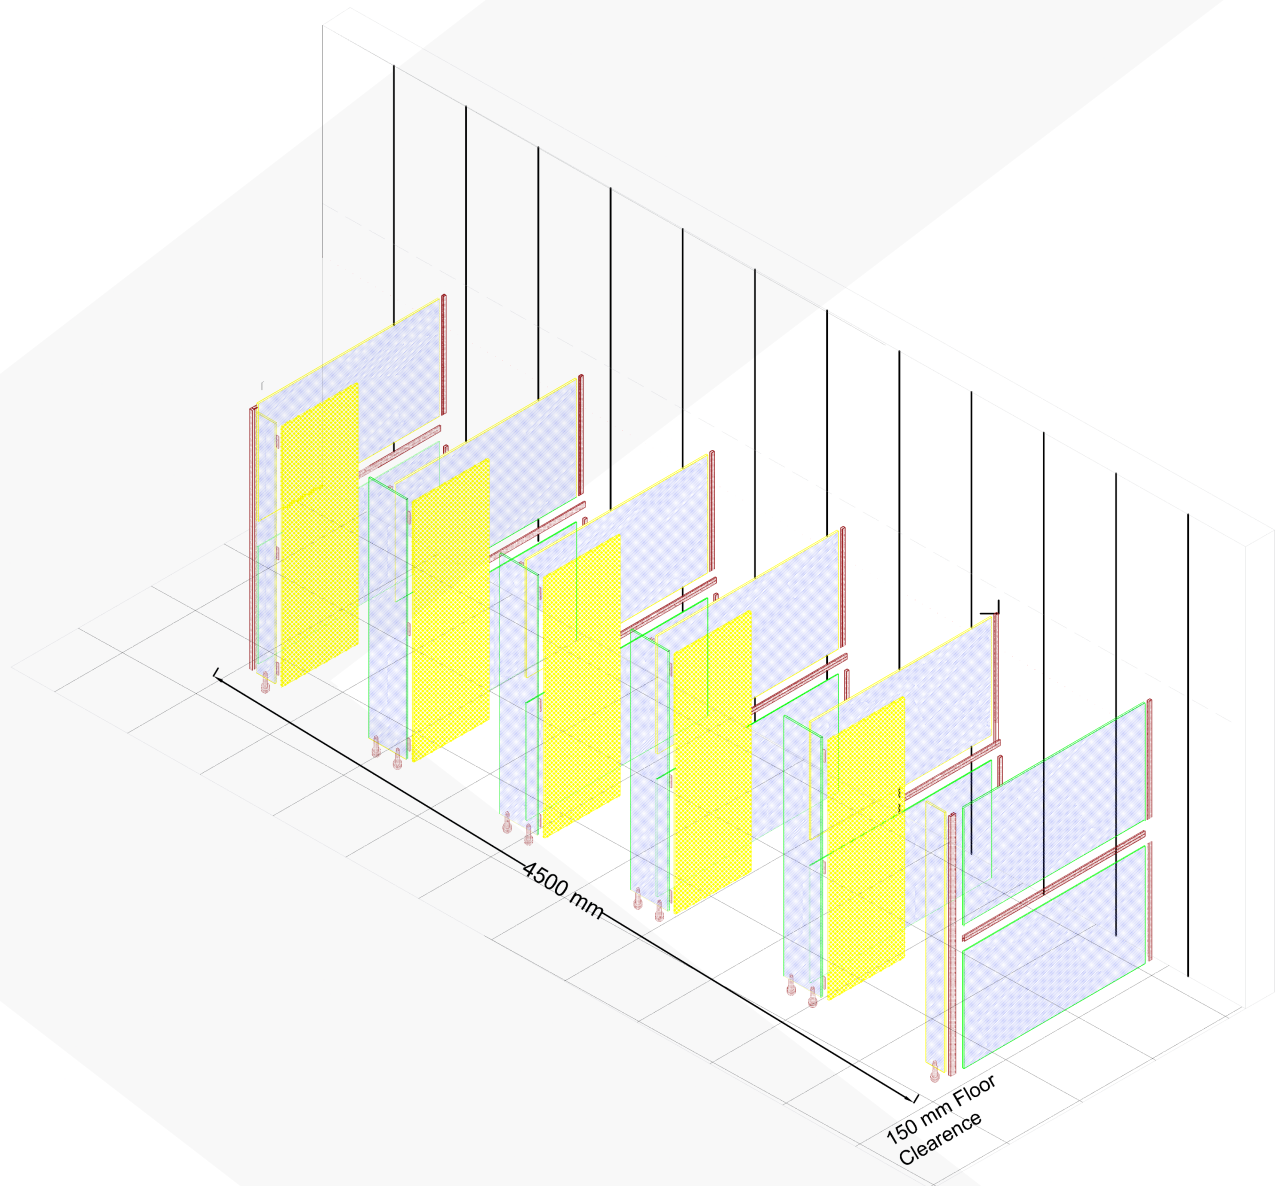


- Fix and secure mid pilasters into the U-profile using the fitting provided.
- Fix 2xL-profile to the end divider(s) and end pilaster(s).
- Fix 2x Legs to the mid pilaster(s), wind the support leg until panel is level, then drill and secure leg to the floor.

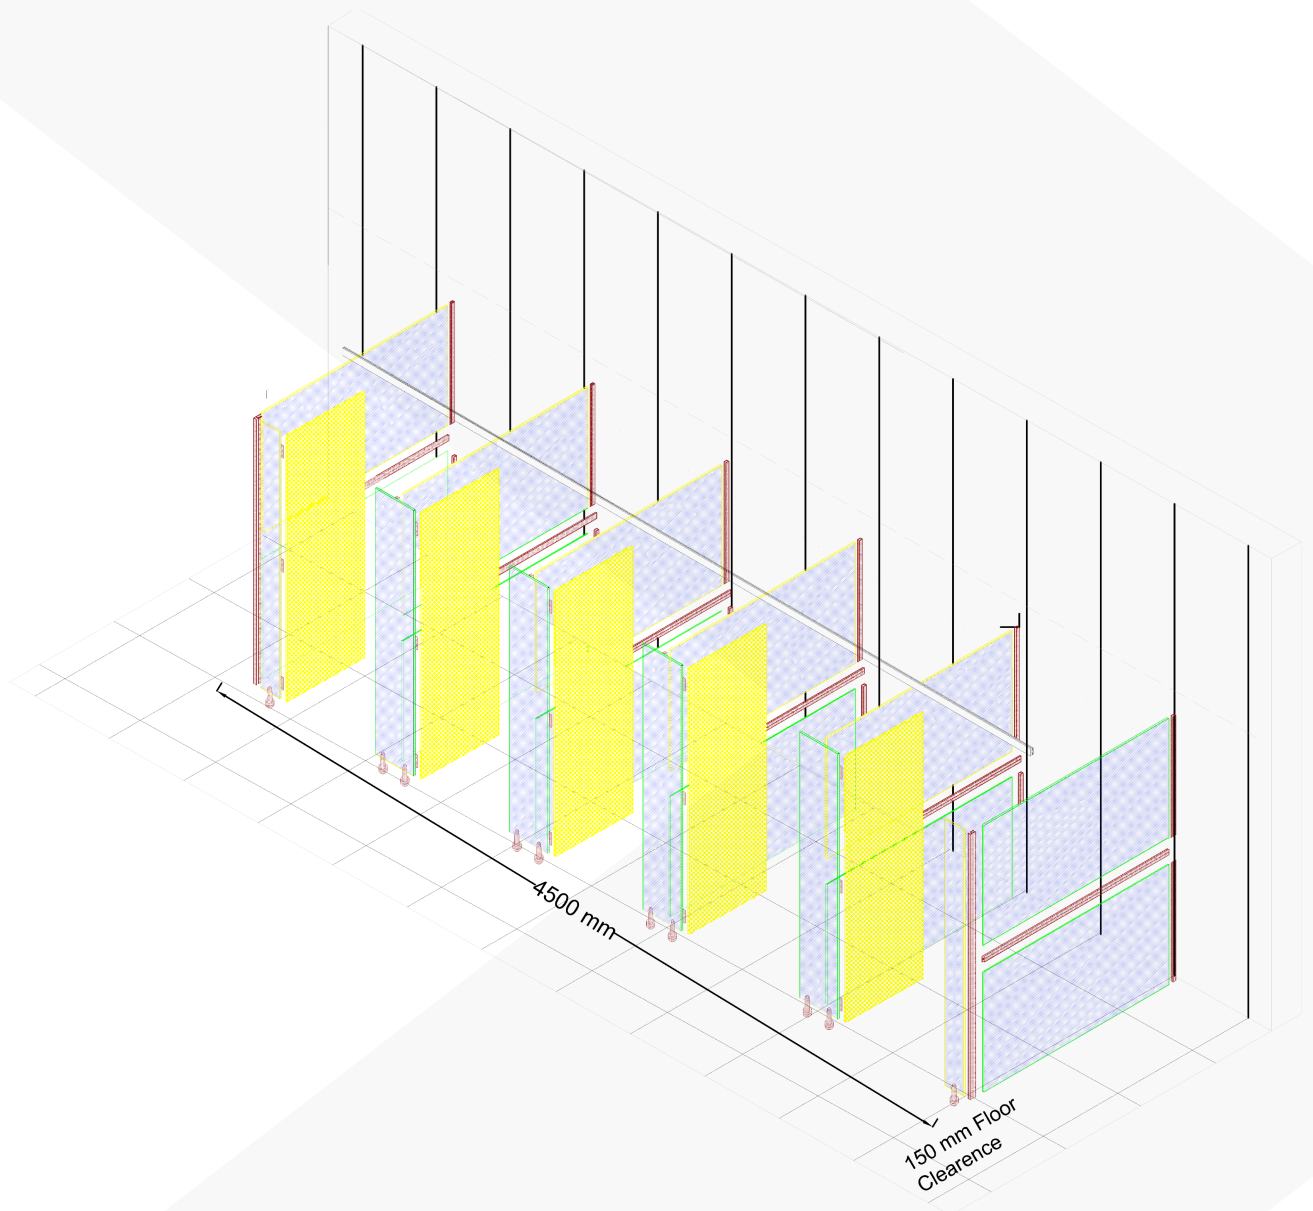

Mark and drill pilot holes in the top section of top rail to fix to each pilaster.

Drill and fix top rail down into the top of the front pilaster.

Step 06

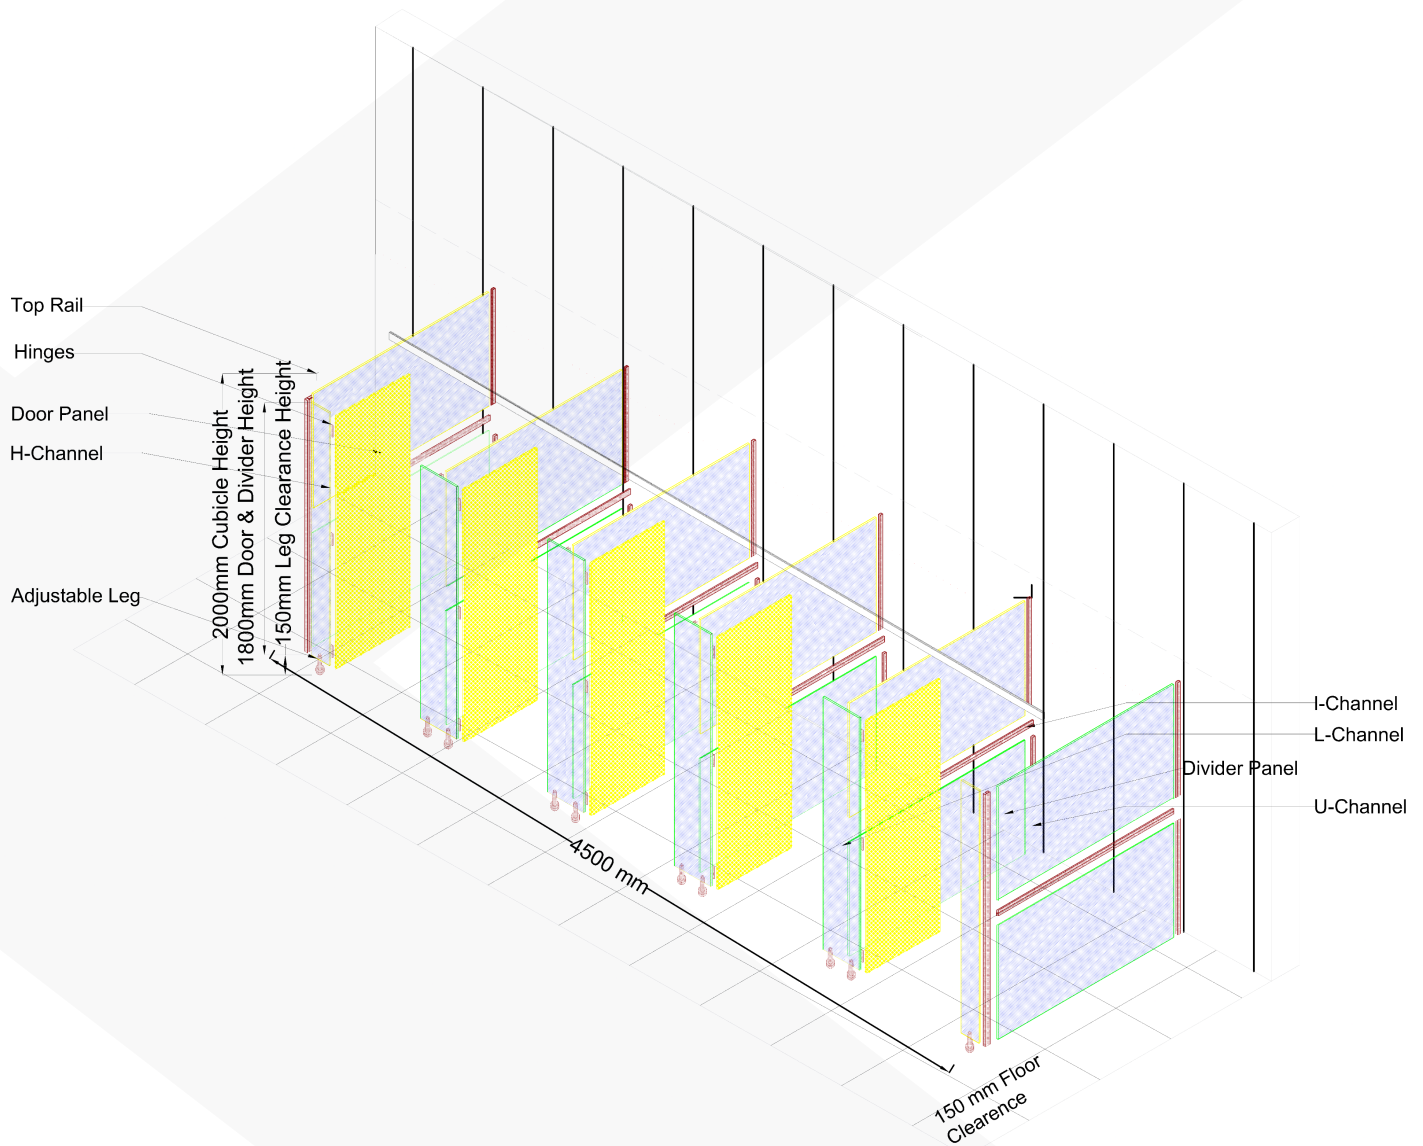

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support

CUBICLE XPRESS

Delivery at the Speed of Business....

QR Code for download page



Cubiclexpress.com

