

# Instruction Manual

---

## CUBICLE 2 PANEL TO PANEL

Please use this instruction manual to fix your DIY toilet cubicle delivered by Cubiclexpress



**CUBICLE  
XPRESS**

Delivery at the Speed of Business.....


## What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 1 x Mid Pilaster (300 x 1800mm)
3. 2 x Door (600 x 1780mm)
4. 3 x Divider (1500 x 1800mm)
5. 4 x U Profile (1800mm)
6. 4 x H Profile (1800mm)
7. 1 x Top Rail (1800mm)
8. 2 x L Profile (1800mm)
9. 3 x I Profile (1500mm)
10. 4 x Support Legs
11. 6 x Hinges
12. 2 x Indicator Lock
13. 2 x Door Knob
14. 2 x Coat Hook
15. 2 x Rubber Beading (1800mm)
16. Screws & Gittis

## Hardware and Profiles



Indicator Lock

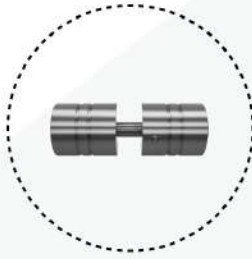

Door Knob



Coat Hook



Adjustable Leg




Hinge




Top Rail



I-Profile

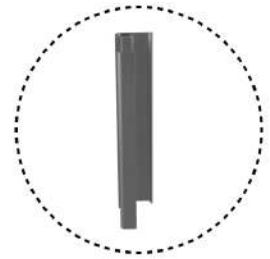

H-Profile

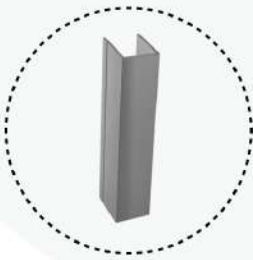

U-Profile



L-Profile

## Tools required



Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

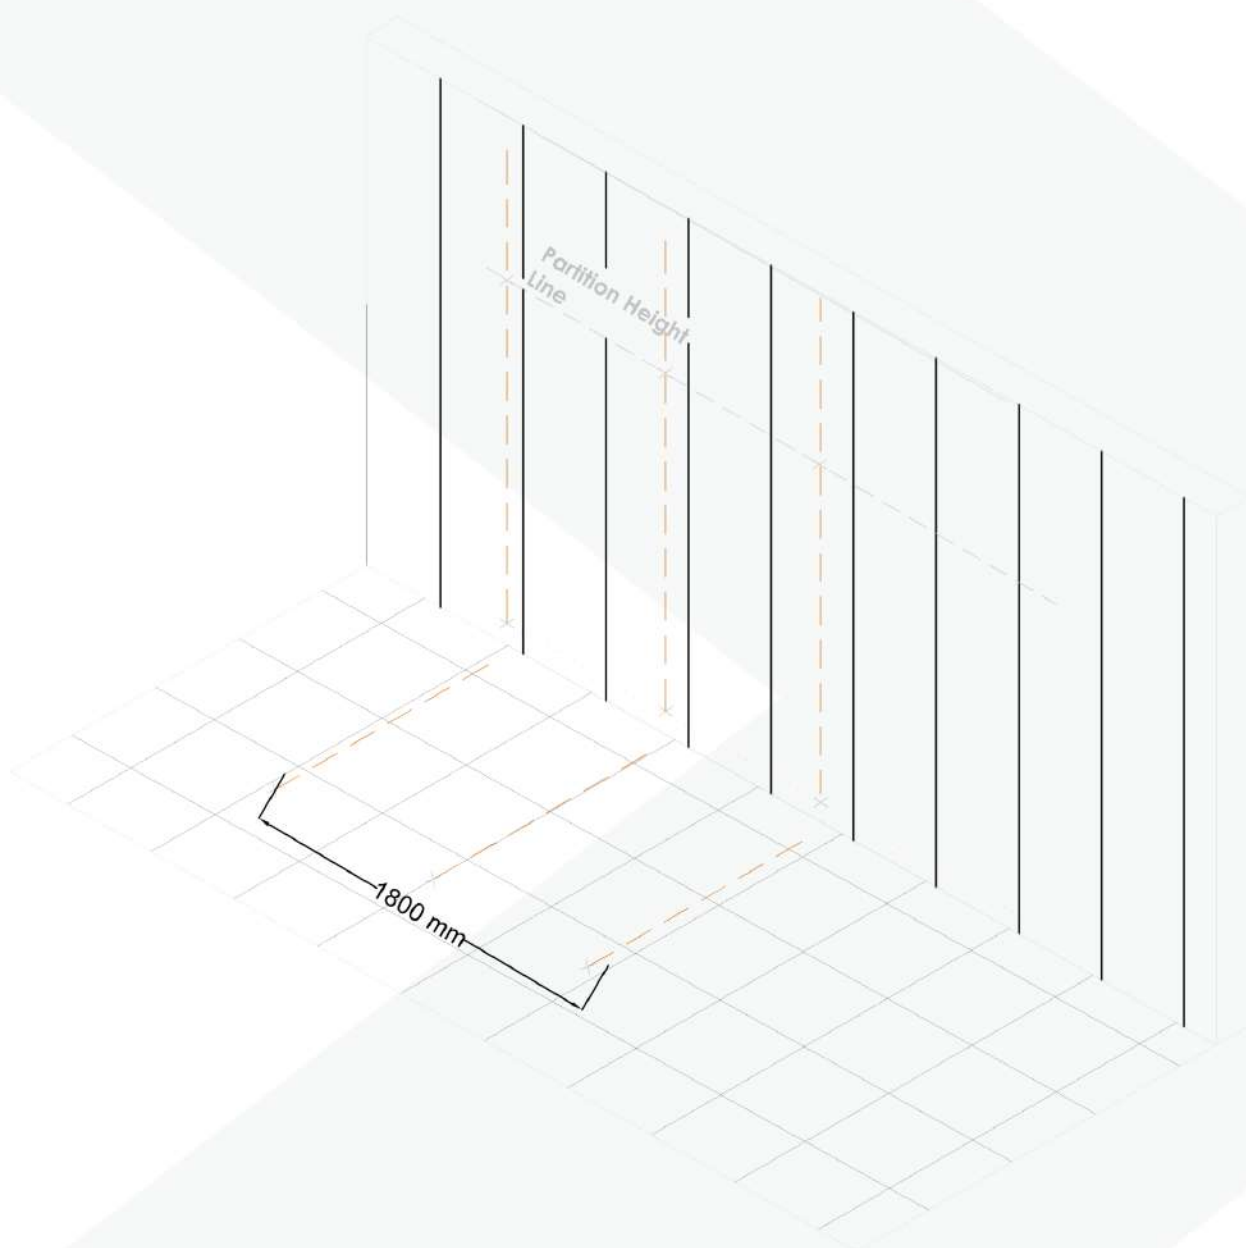

● Measure and mark a vertical line on the rear walls of divider partition positions.

● Then mark the wall equally to fix 1x U-Profile per divider partition. Please see dimensions above for U-profile position.


## Step 02

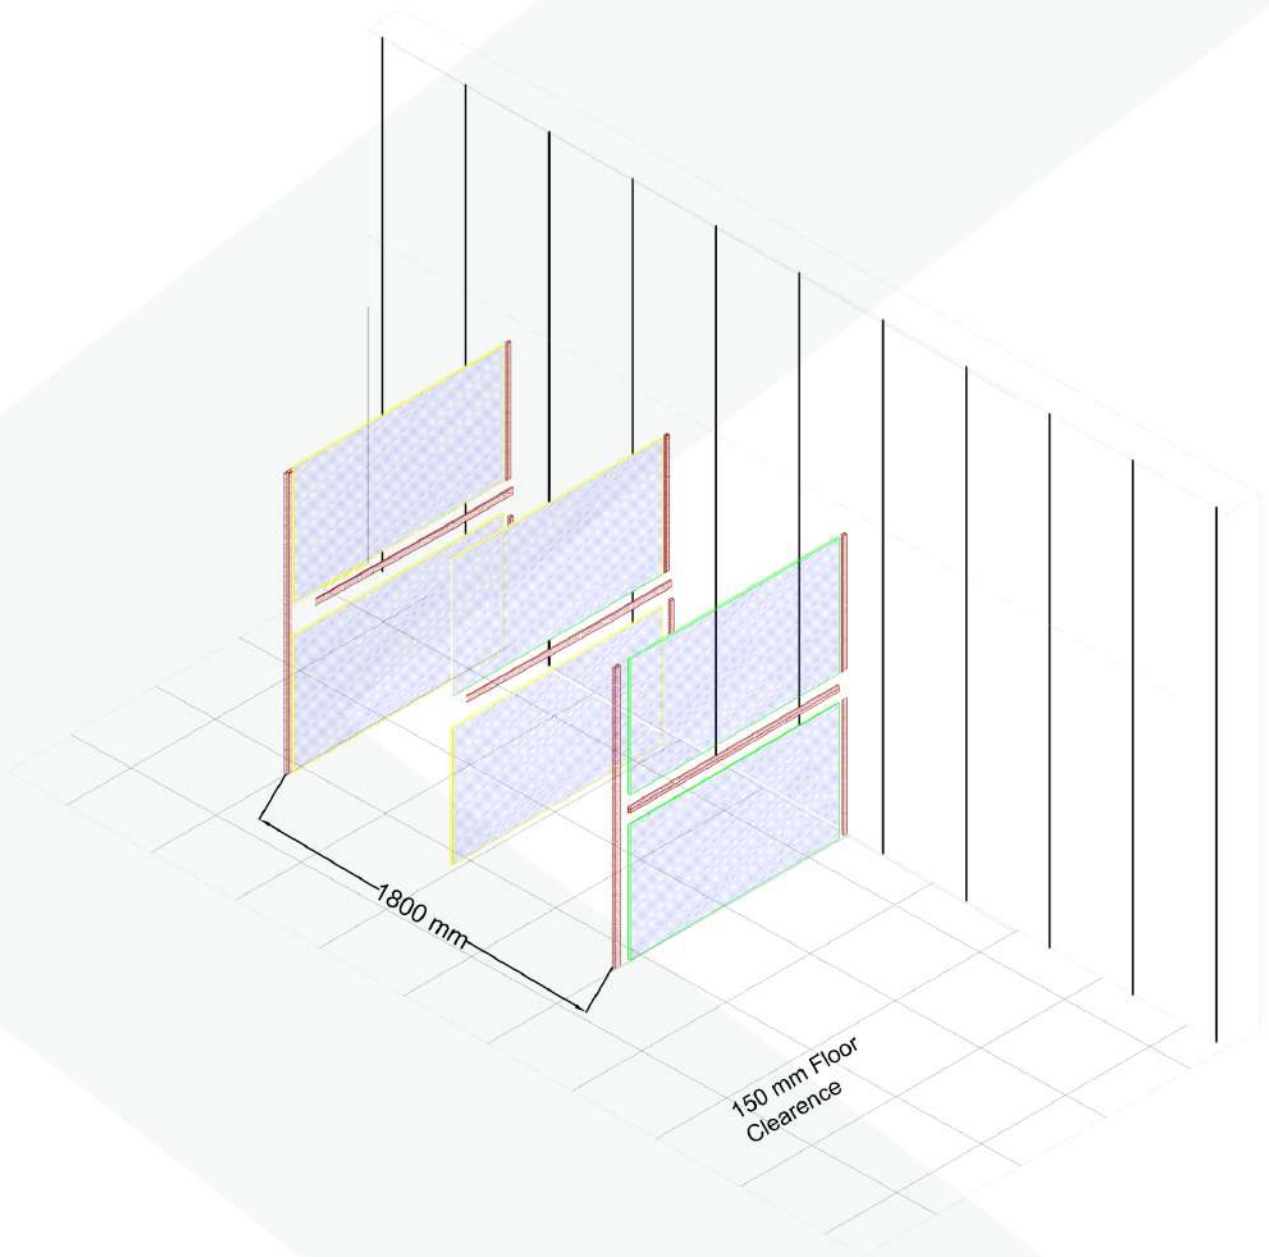

- Fix 1xU-Profile for each divider on the vertical line marked.

- Place the pilaster panel into the 1xU-profile on the side structural wall, securing the panel with fixings provided on both divider partition


- Insert the I-channel joining strip onto the pilaster panel.

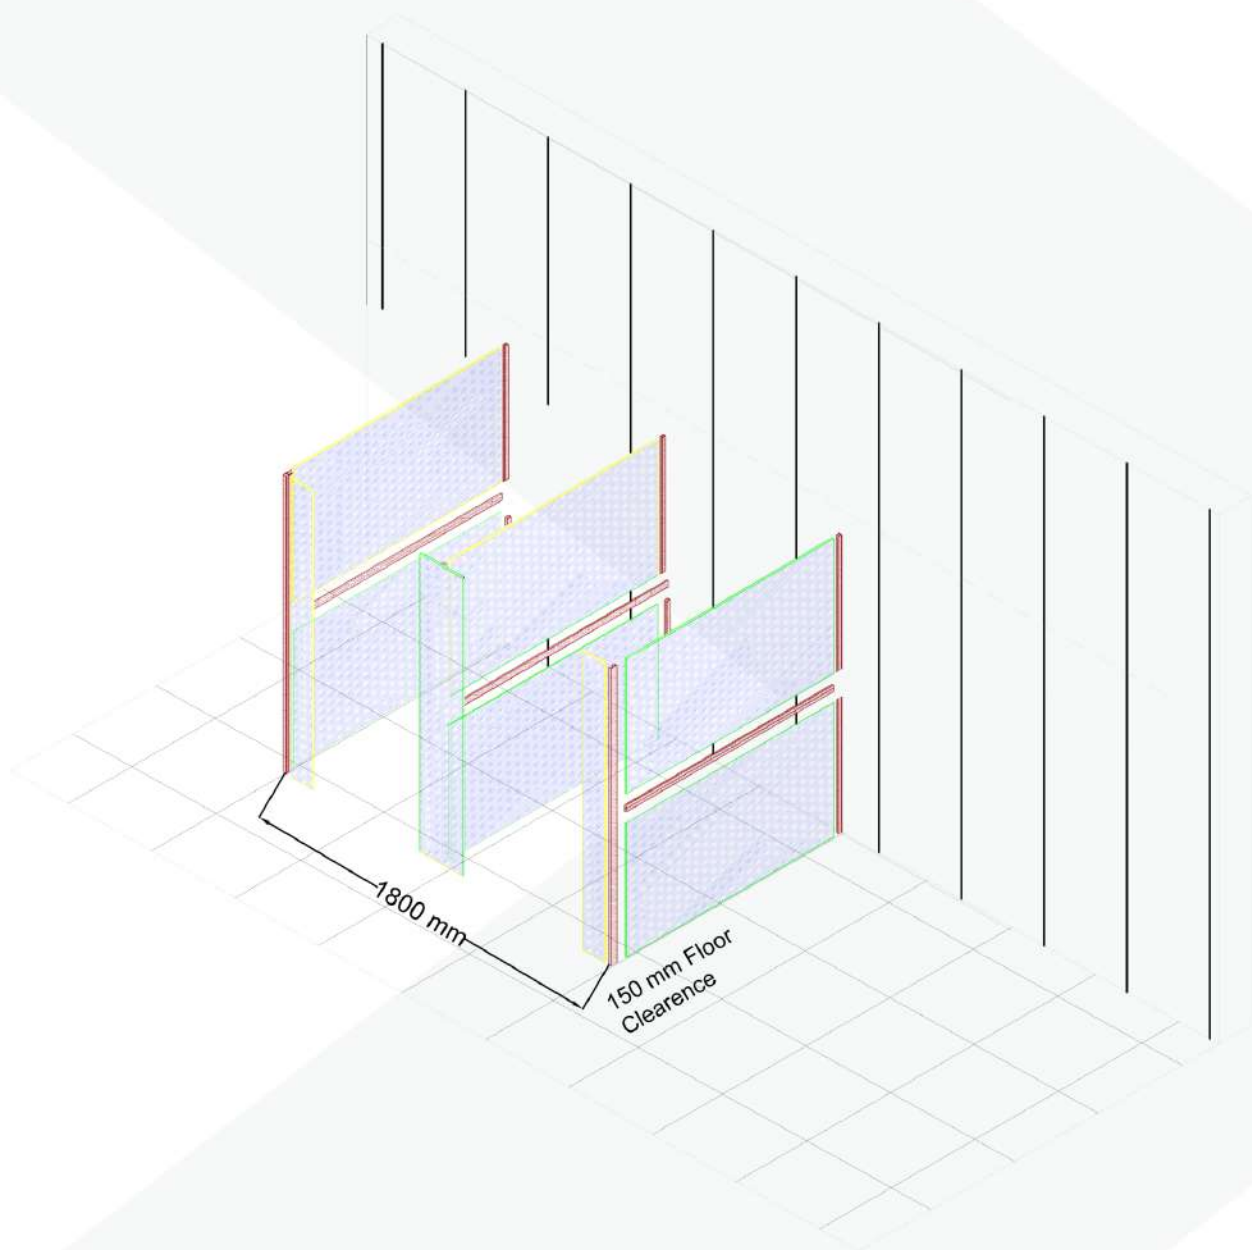


- Fix and secure end pilaster into L-profile using the fitting provided.
- Fix L-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.



## Step 04

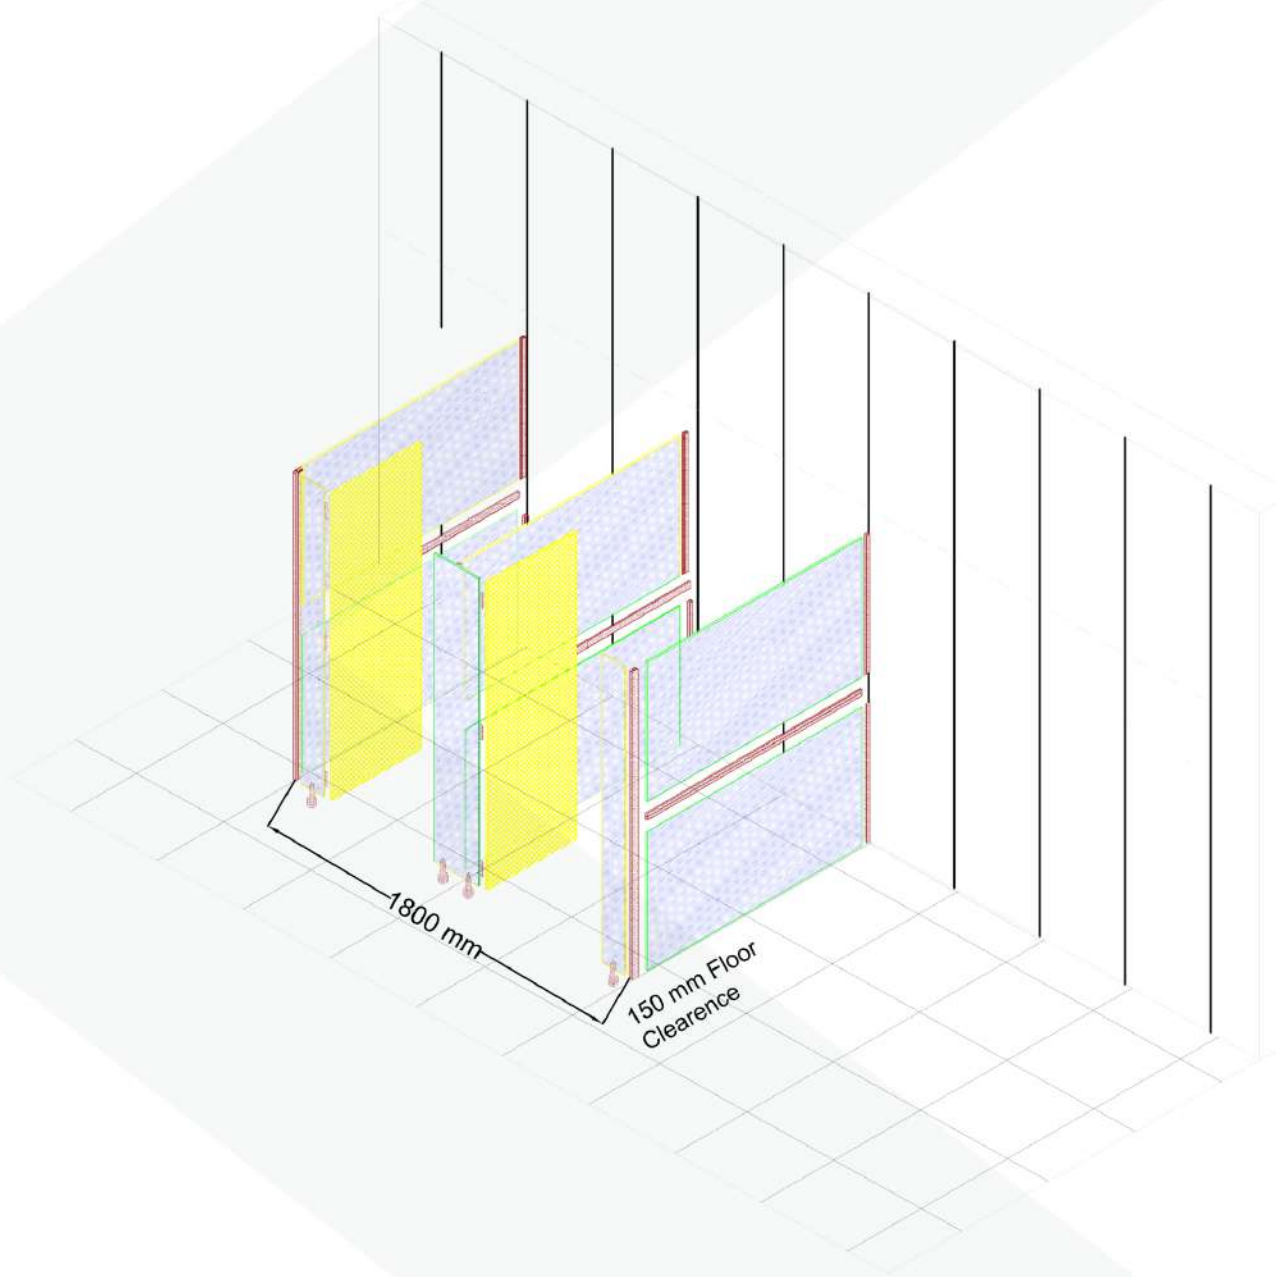


- Fix and secure mid pilasters into the U-profile using the fitting provided.
- Fix 2xL-profile to the end divider(s) and end pilaster(s).
- Fix 2x Legs to the mid pilaster(s), wind the support leg until panel is level, then drill and secure leg to the floor.

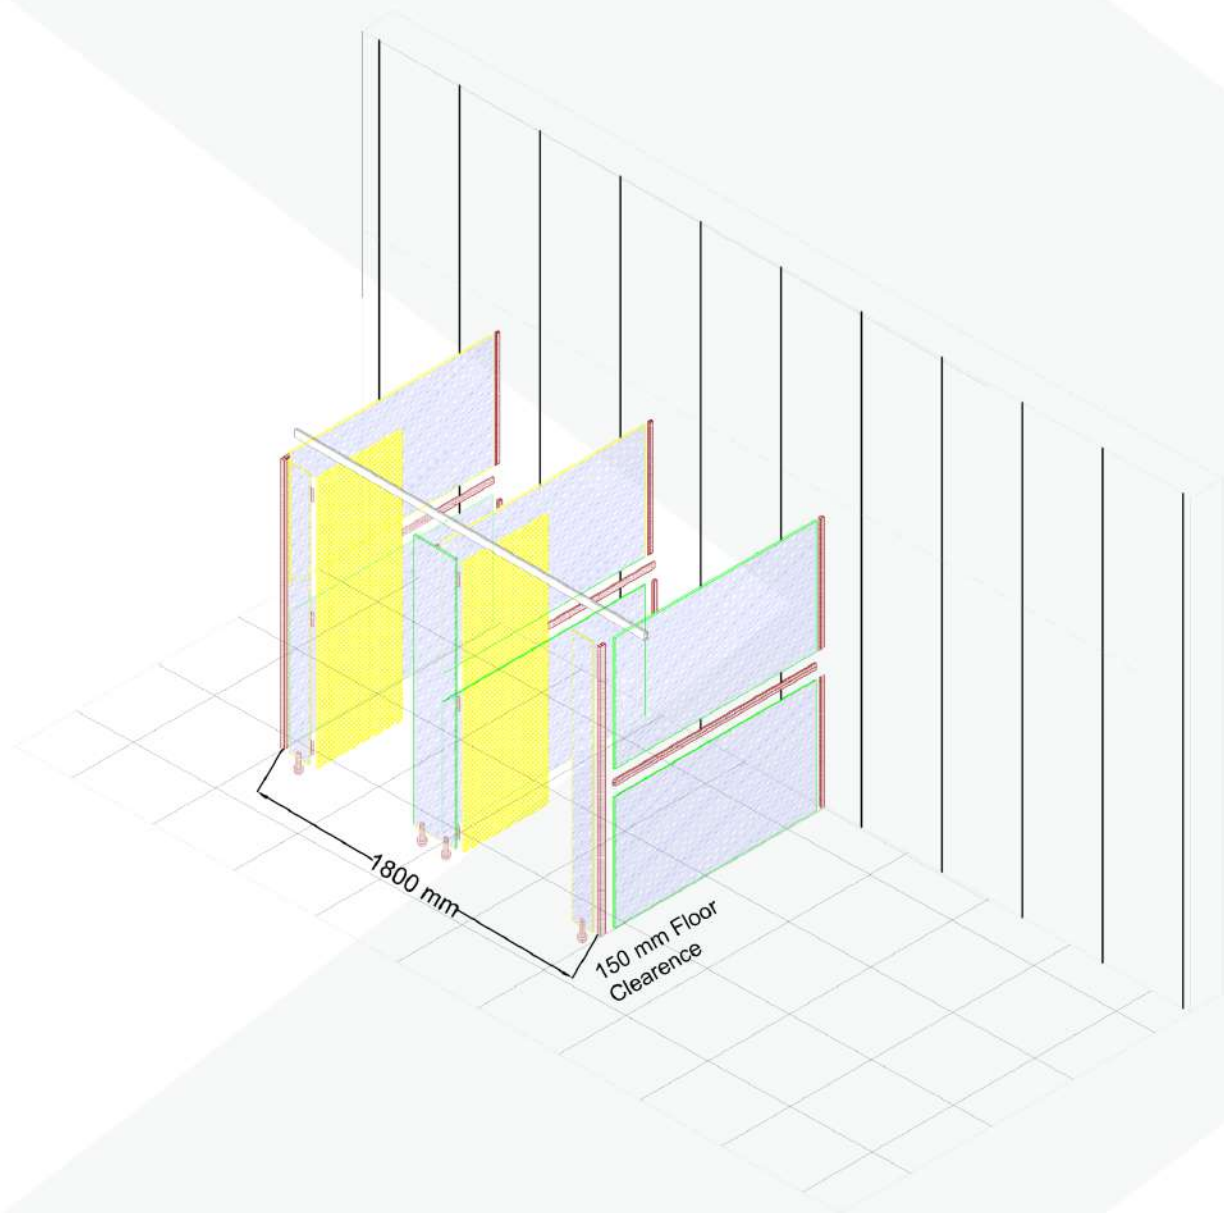

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.



## Step 06

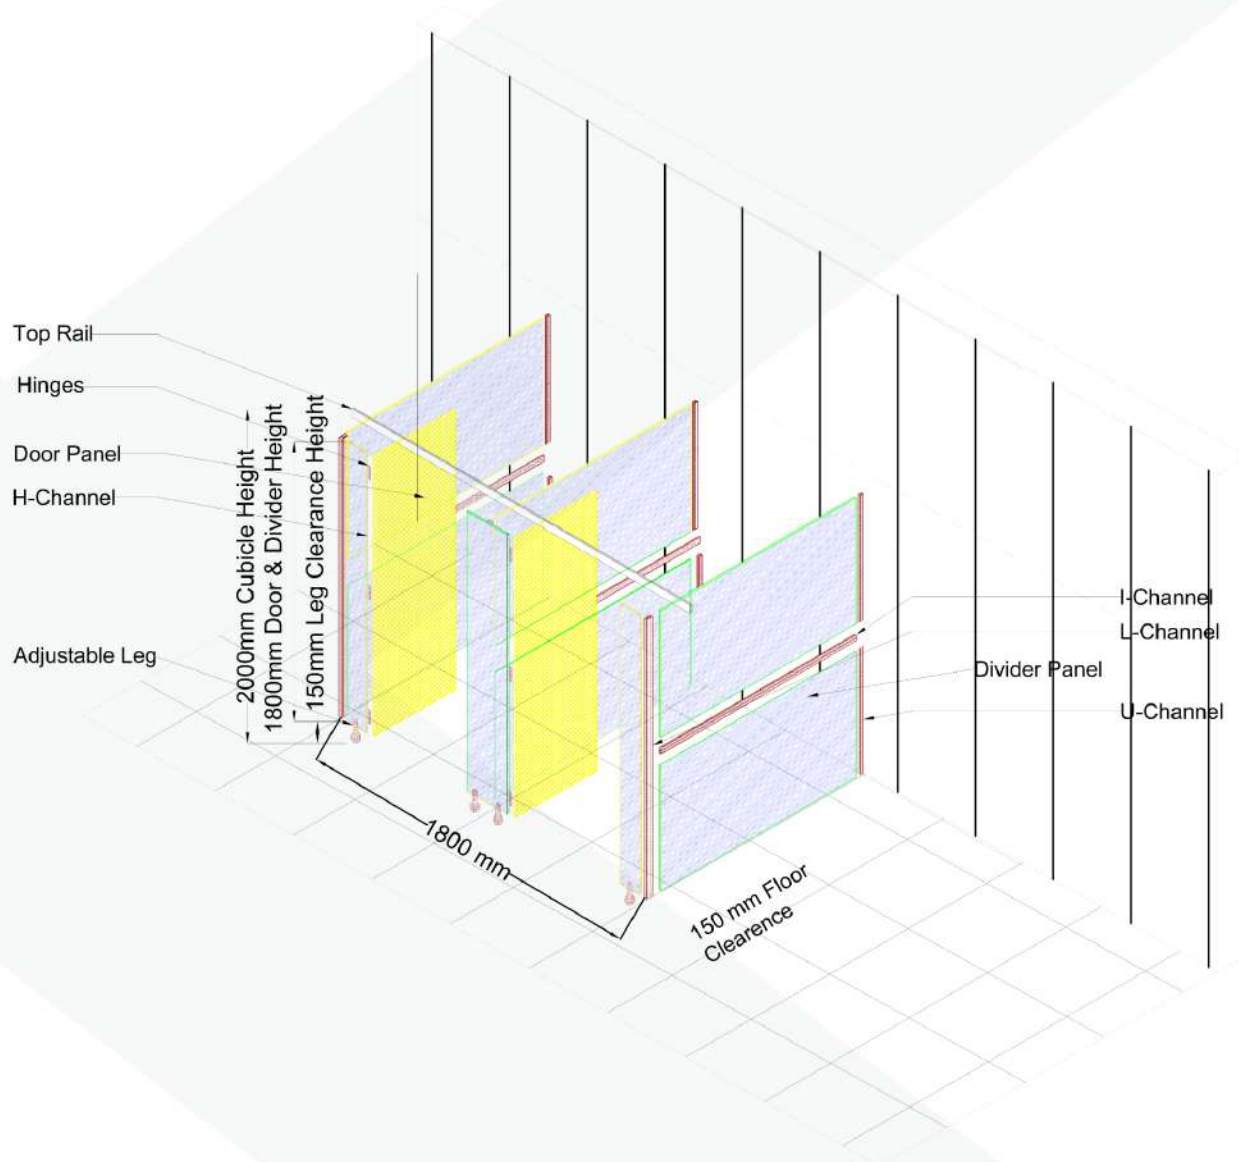

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support



Download page



Cubiclexpress.com

