


Instruction Manual

CUBICLE 3 WALL TO WALL

Please use this instruction manual to fix your DIY toilet cubicle delivered by Cubiclexpress.

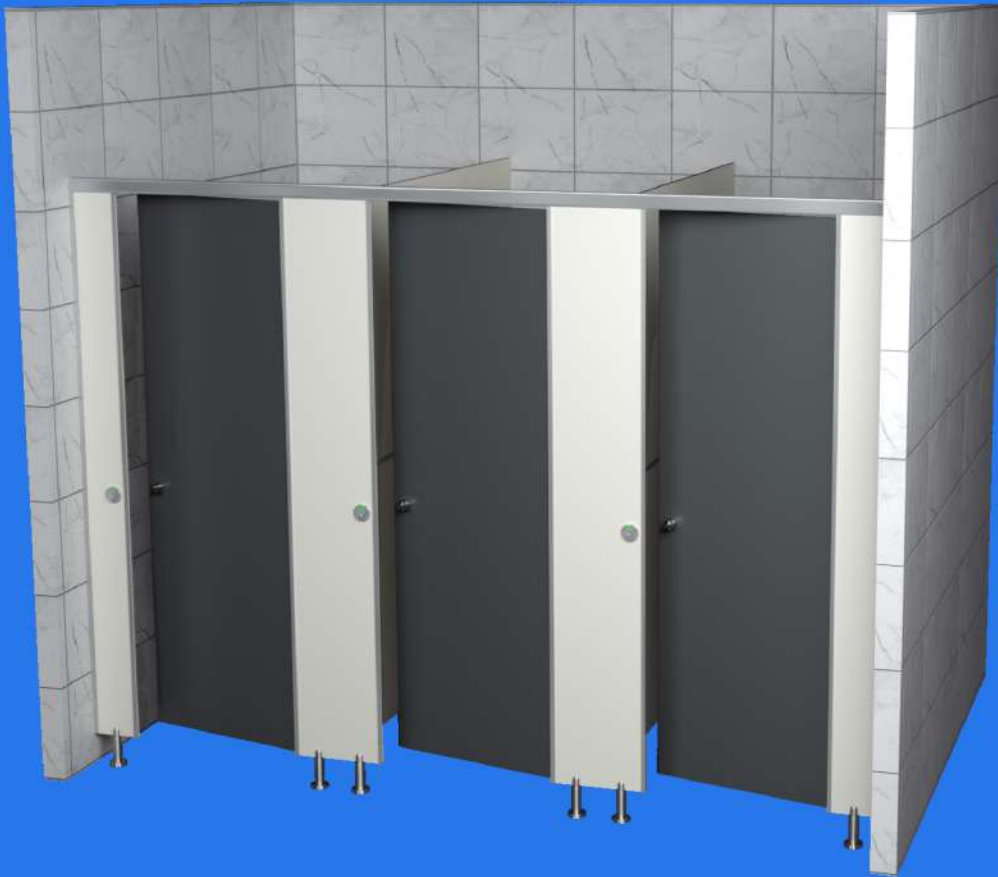

**CUBICLE
XPRESS**

Delivery at the Speed of Business.....


What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 2 x Mid Pilaster (300 x 1800mm)
3. 3 x Door (600 x 1780mm)
4. 2 x Divider (1500 x 1800mm)
5. 6 x U Profile (1800mm)
6. 6 x H Profile (1800mm)
7. 1 x Top Rail (2700mm)
8. 2 x I Profile (1500mm)
9. 6 x Support Legs
10. 9 x Hinges
11. 3 x Indicator Lock
12. 3 x Door Knob
13. 3 x Coat Hook
14. 3 x Rubber Beading (1800mm)
15. Screws & Gittis.

Hardware and Profiles



Indicator Lock

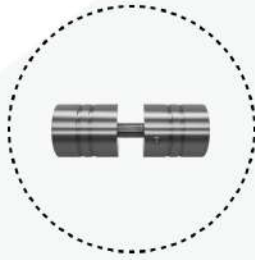

Door Knob



Coat Hook




Adjustable Leg




Hinge



Top Rail

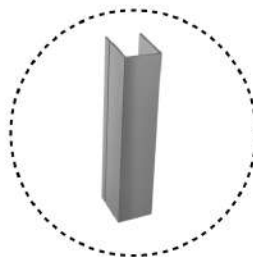

U-Profile

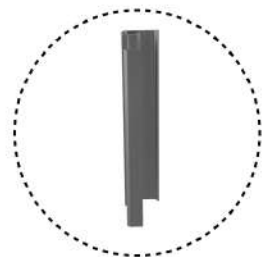

H-Profile



I-Profile

Tools required




Hammer Drill



Circular Saw



Spirit Level



Cordless Drill



Tape Measure



Screwdriver




Pencil



Allen Key Set




Hammer

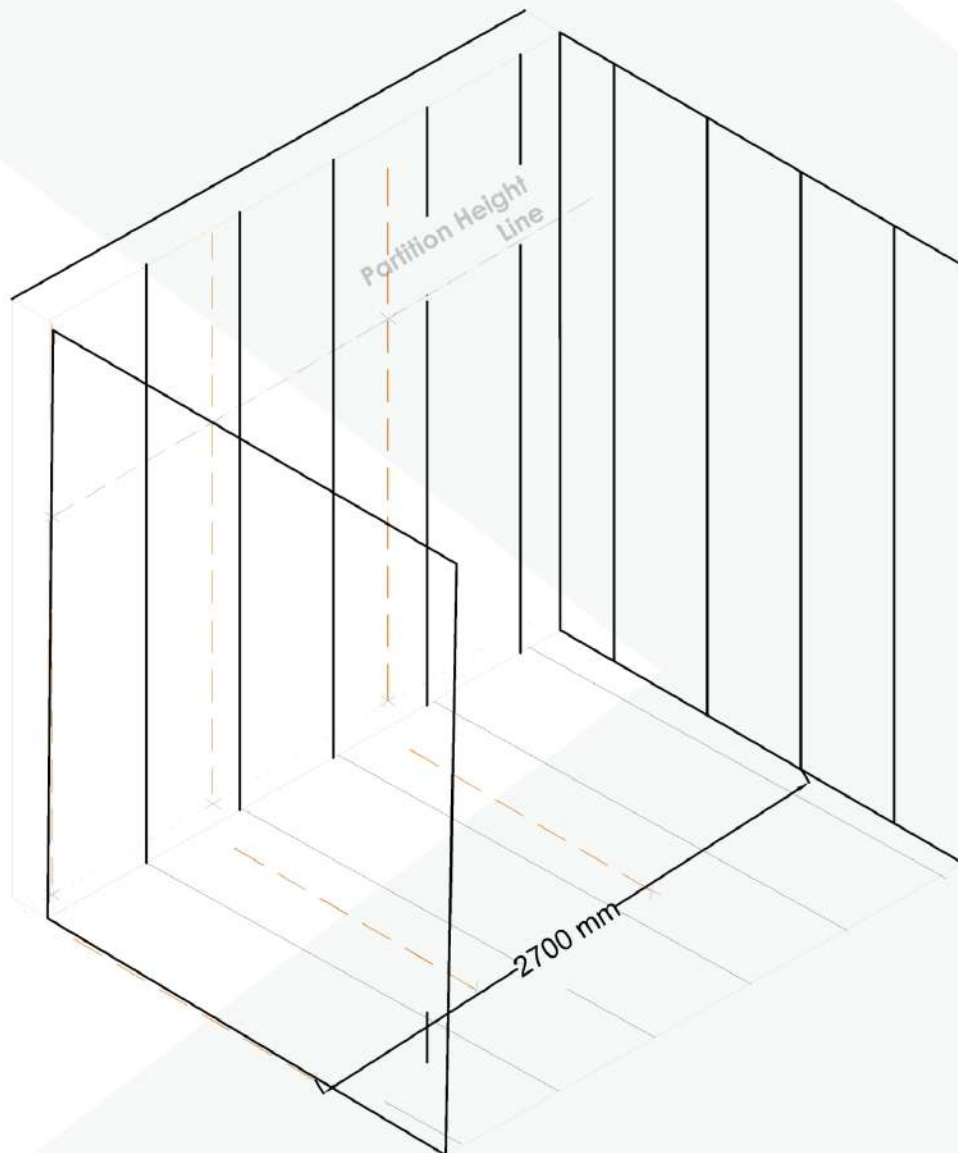

Measure and mark a vertical line on the side walls of end partition positions.

Then mark the wall equally to fix 1x U-Profile per end wall pilasters. Please see dimensions above for U-profile position.


Step 02

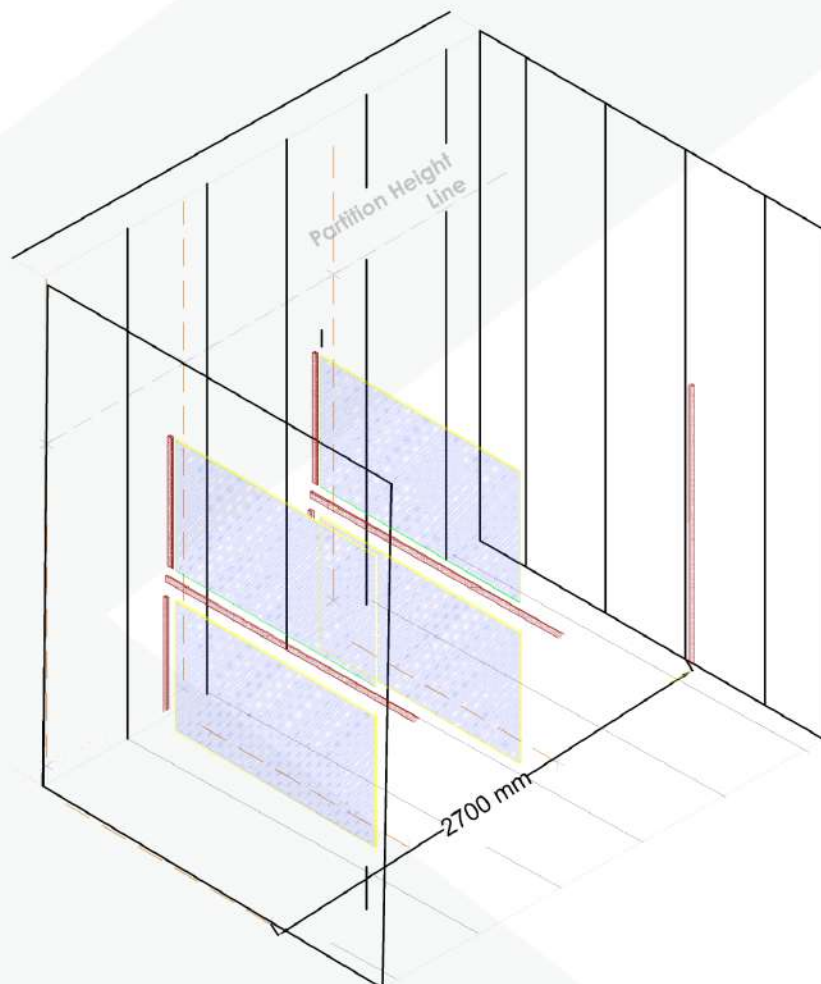

- Fix 1xU-Profile for each pilaster on the vertical line marked.


- Place the pilaster panel into the 1xU-profile on the side structural wall, securing the panel with fixings provided.

- Insert the H-channel joining strip onto the pilaster panel.

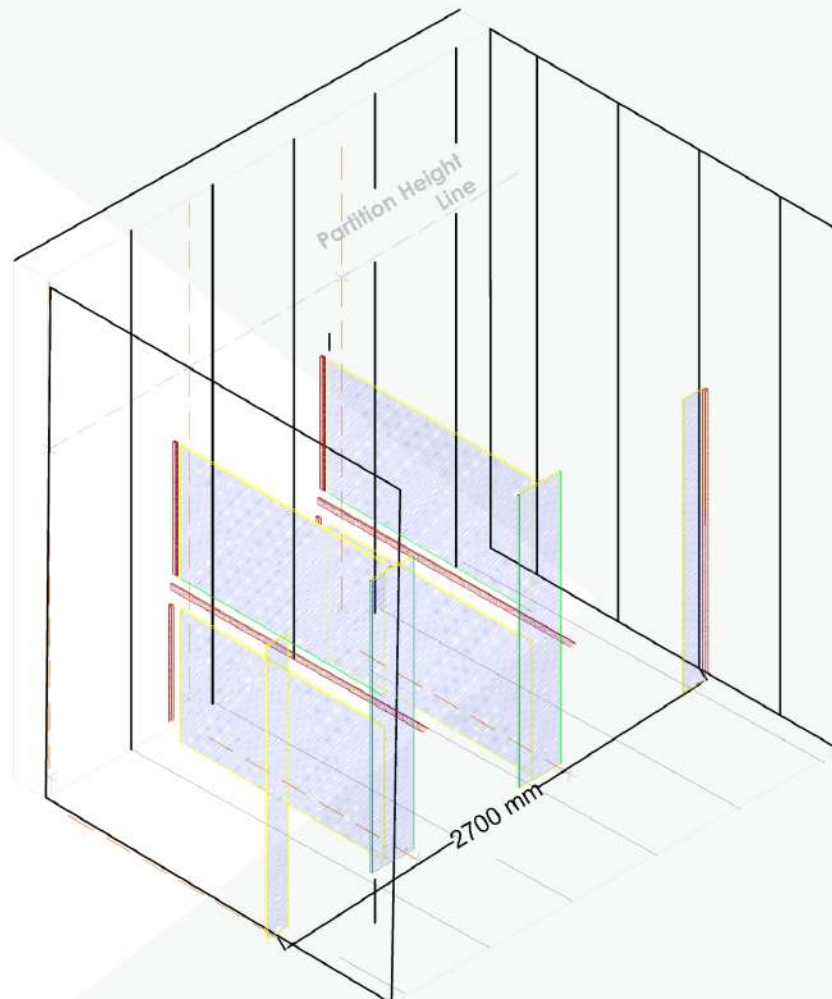


- Fix and secure wall pilaster into U-profile using the fitting provided.
- Fix U-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

Step 04

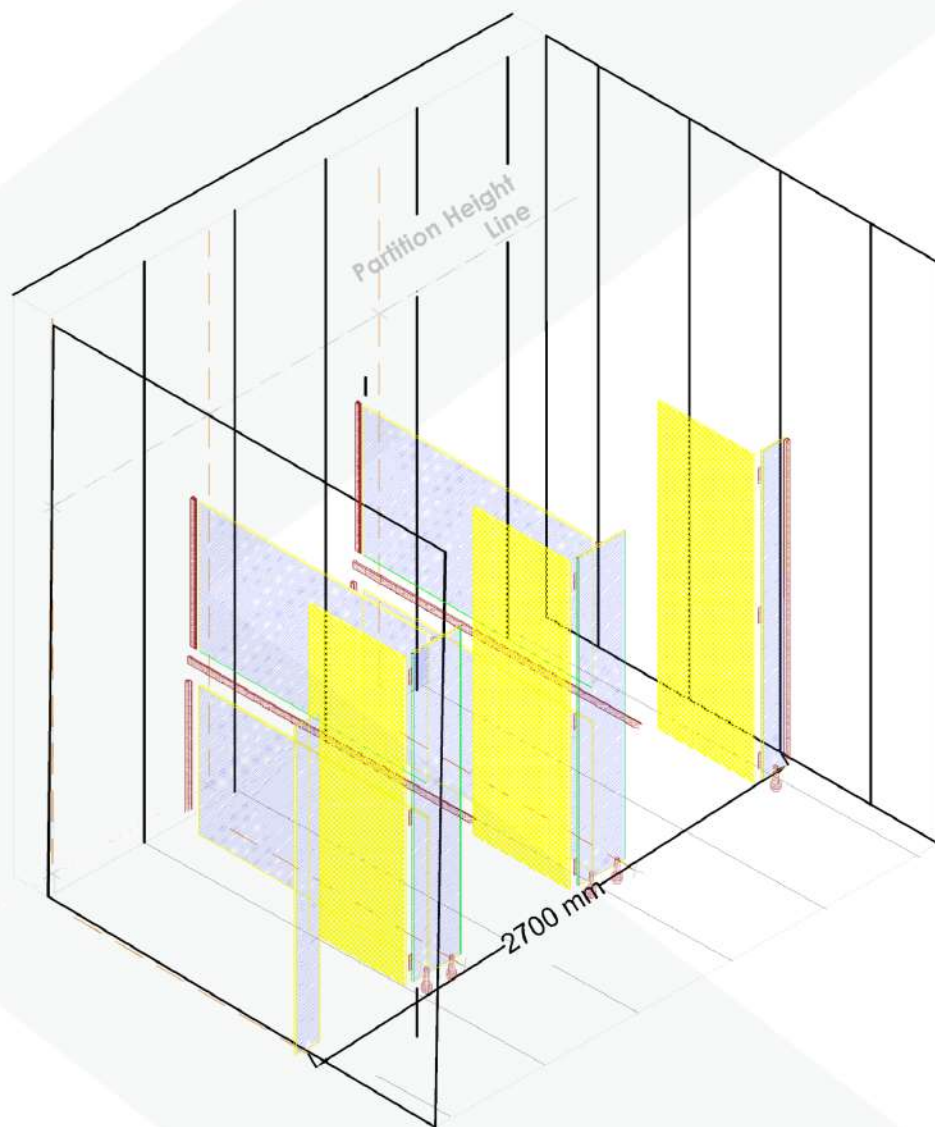


- Fix and secure mid pilasters into the U-profile using the fitting provided.
- Fix 2x Legs to the mid pilaster(s), wind the support leg until panel is level, then drill and secure leg to the floor.

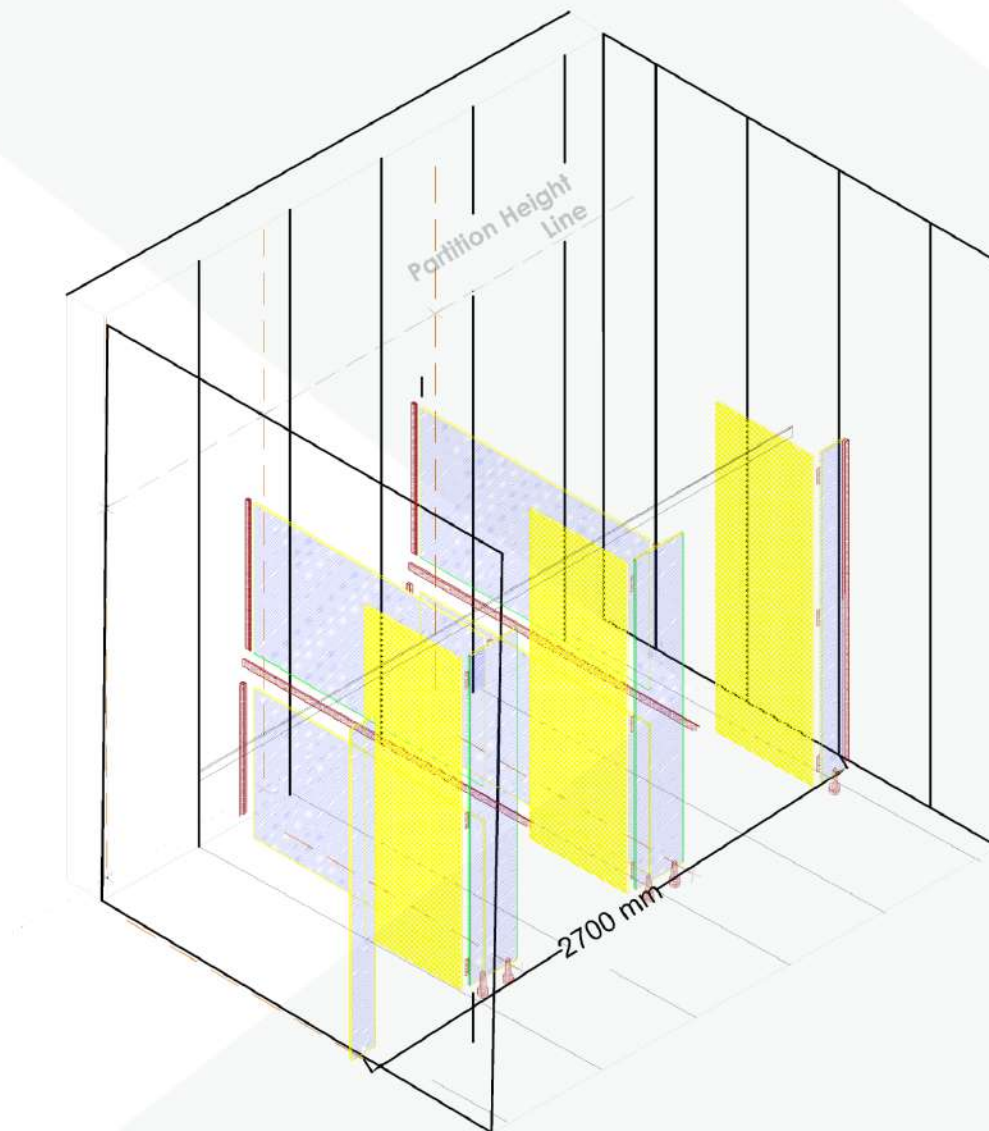

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.

Step 06

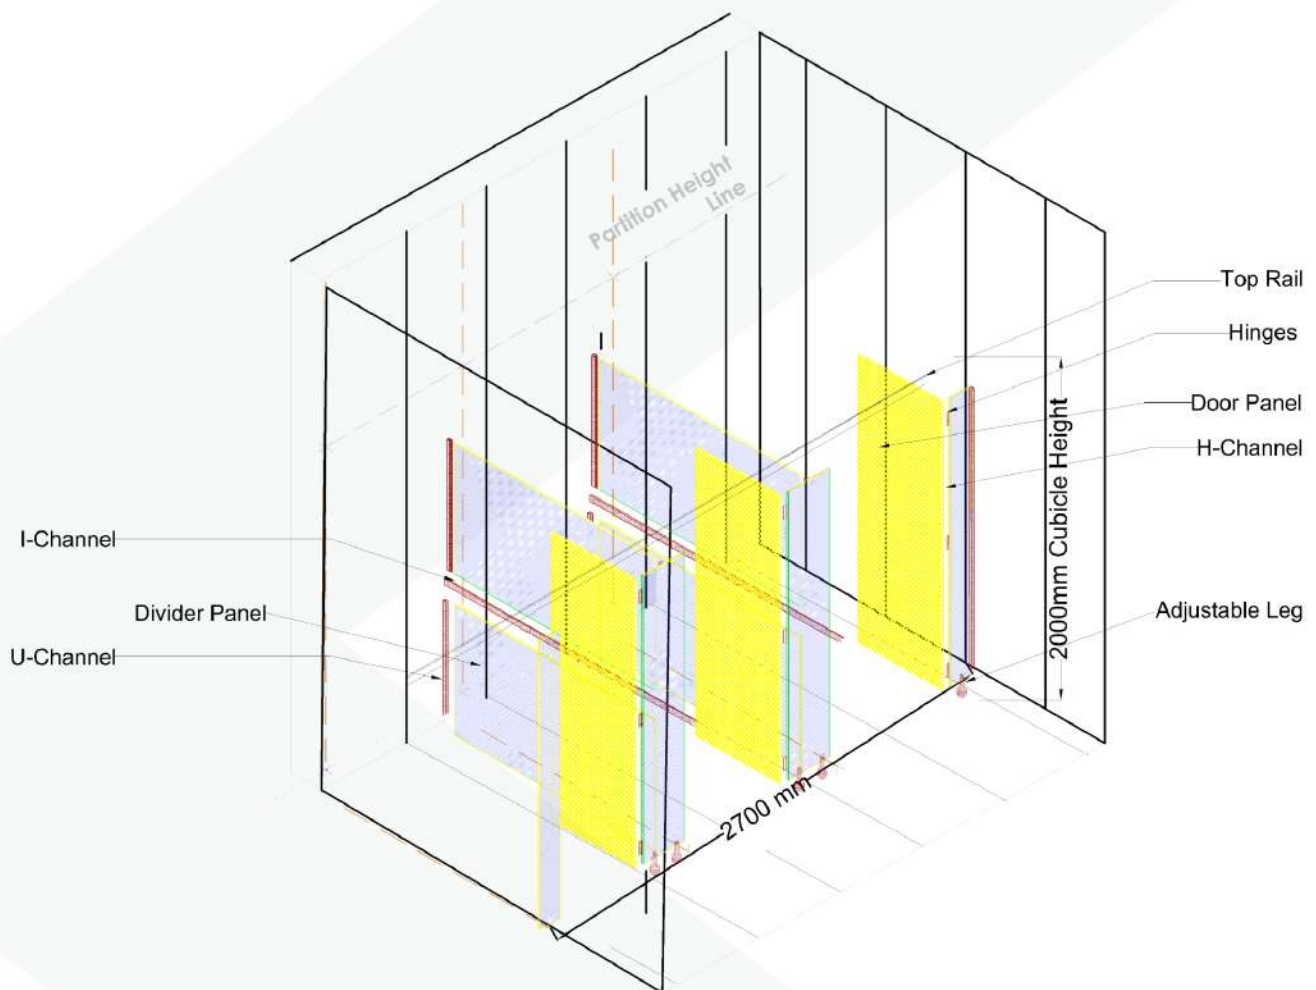

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support



Download page



Cubiclexpress.com

