

Instruction Manual

CUBICLE 5 RIGHT

Please use this instruction manual to fix your DIY toilet cubicle delivered by Cubiclexpress



**CUBICLE
XPRESS**

Delivery at the Speed of Business.....


What's in the Box?

1. 2 x End Wall Pilasters (150 x 1800mm)
2. 4 x Mid Pilaster (300 x 1800mm)
3. 5 x Door (600 x 1780mm)
4. 5 x Divider (1500 x 1800mm)
5. 10 x U Profile (1800mm)
6. 10x H Profile (1800mm)
7. 1 x Top Rail (3600mm)
8. 1 x Top Rail (900mm)
9. 1 x L Profile (1800mm)
10. 5 x I Profile (1500mm)
11. 10 x Support legs
12. 15 x Hinges
13. 5 x Indicator Lock
14. 5 x Door Knob
15. 5 x Coat hook
16. 5 x Rubber Beading (1800mm)
17. Screws & Gittis.

Hardware and Profiles



Indicator Lock

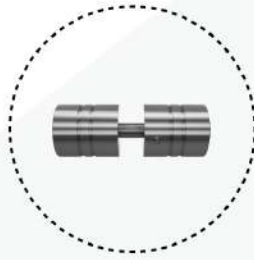

Door Knob



Coat Hook



Adjustable Leg




Hinge




Top Rail



I-Profile

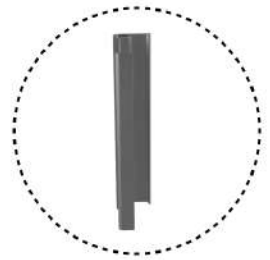

H-Profile

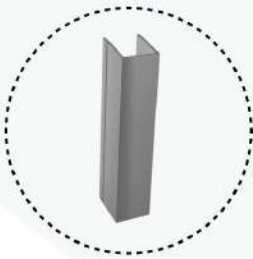

U-Profile



L-Profile

Tools required



Hammer Drill



Circular Saw



Spirit Level




Cordless Drill



Tape Measure




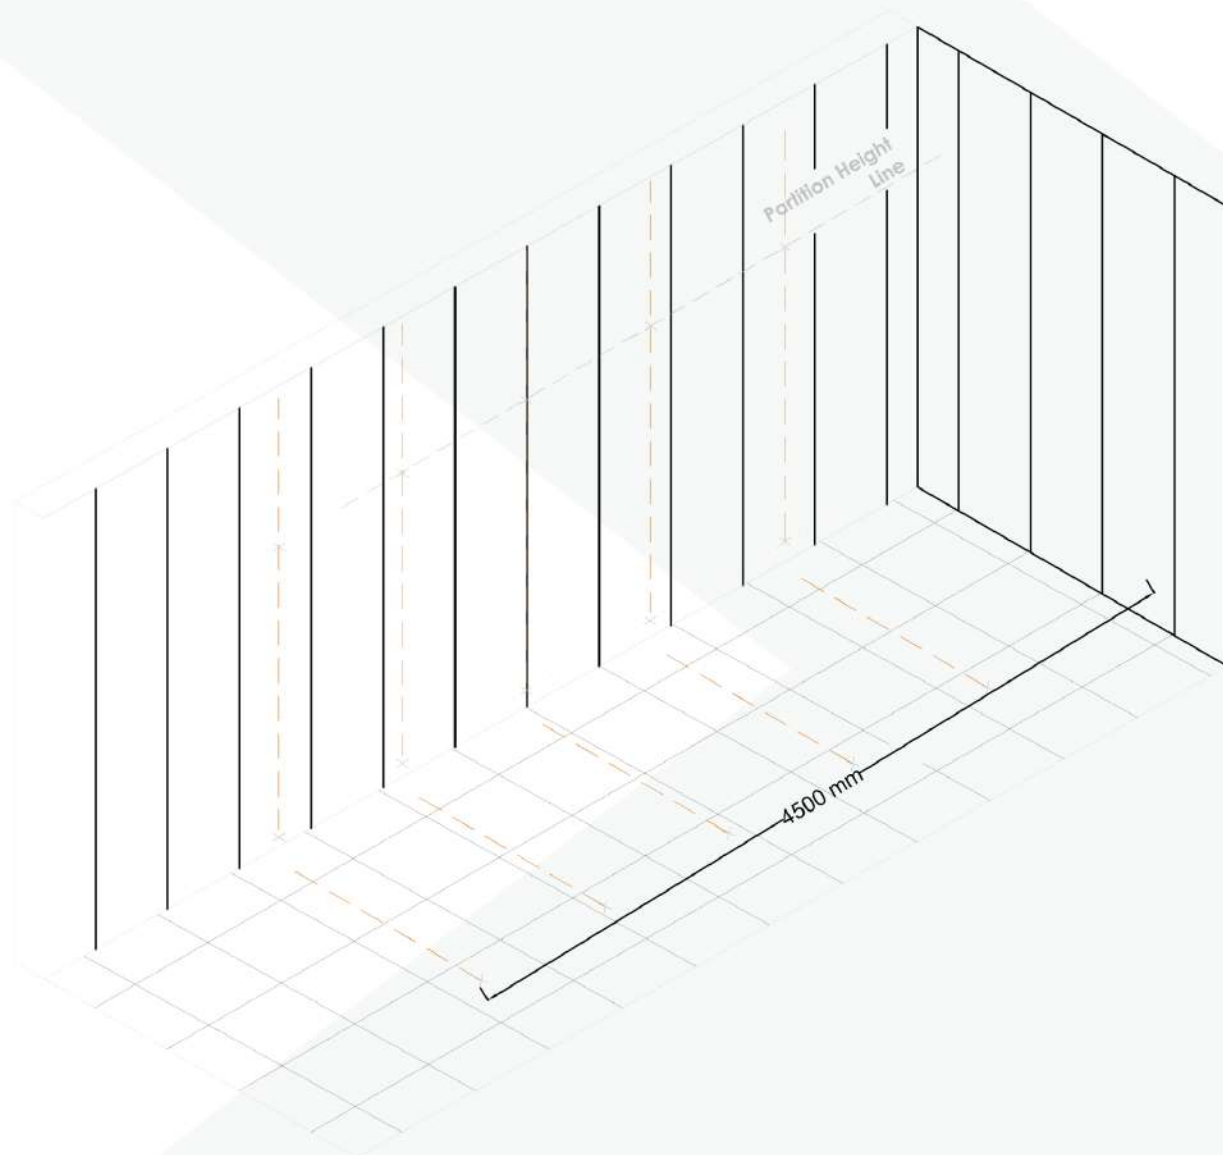


Measure and mark a vertical line on the rear and right side wall of the partition and pilaster positions.

Then mark the wall equally to fix 1x U-Profile per partition and end pilasters. Please see dimensions above for U-profile position.

Step 02

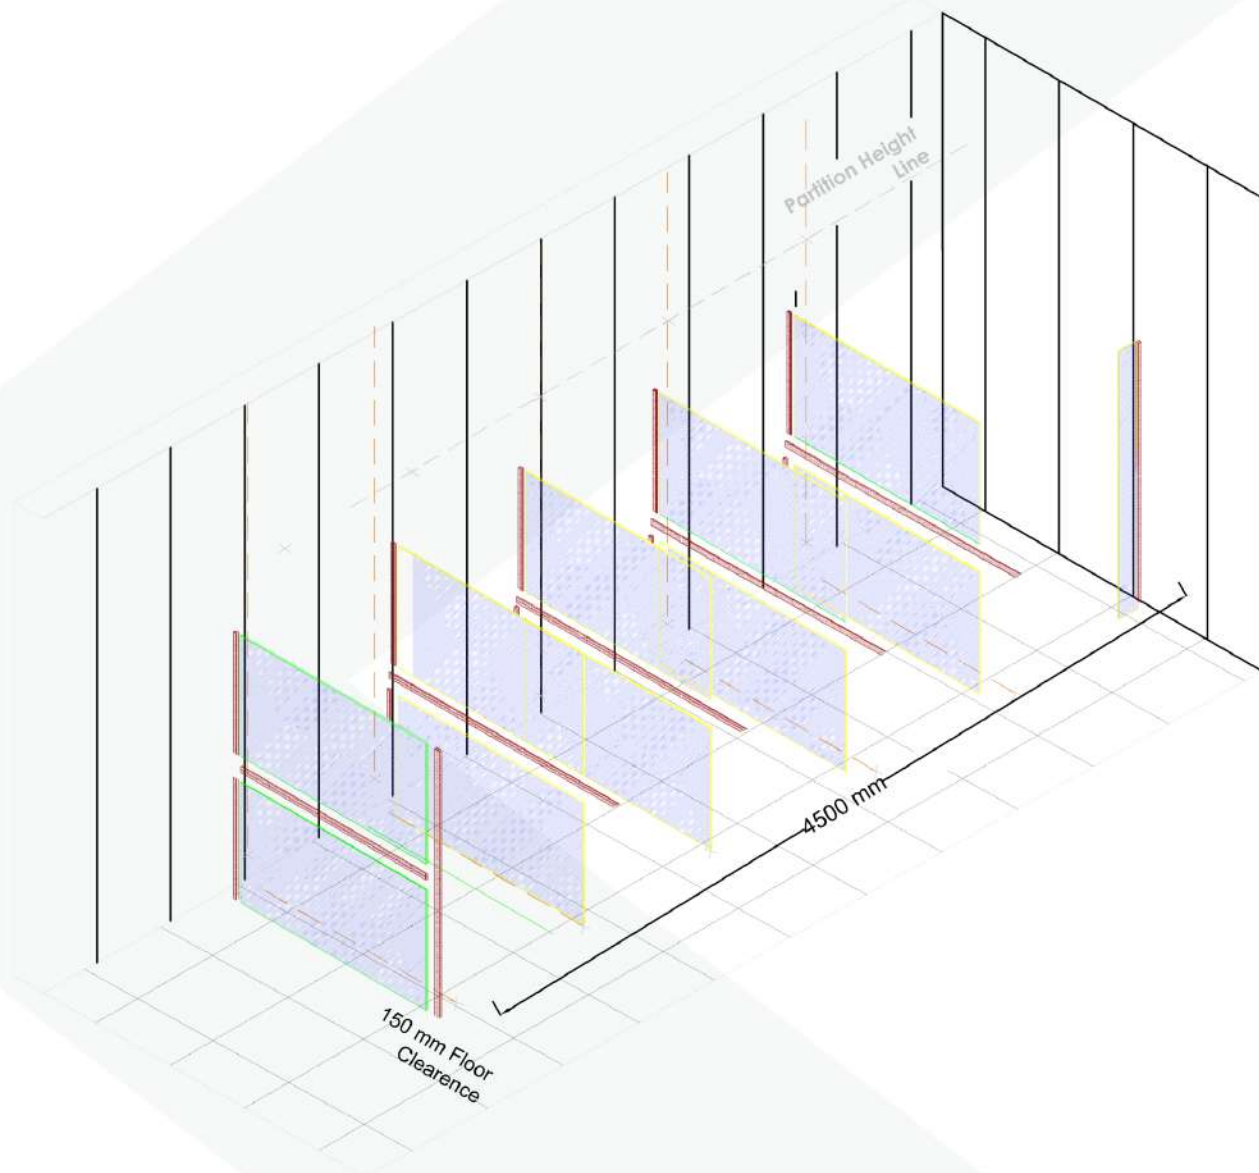


- Fix 1xU-Profile for each partition and pilaster on the vertical line marked.
- Cut the partition panels to size if required in depth.
- Place the bottom partition panel into the 1xU-profile on the back structural wall, securing the panel with fixings provided.
- Insert the I-channel joining strip onto the bottom partition panel

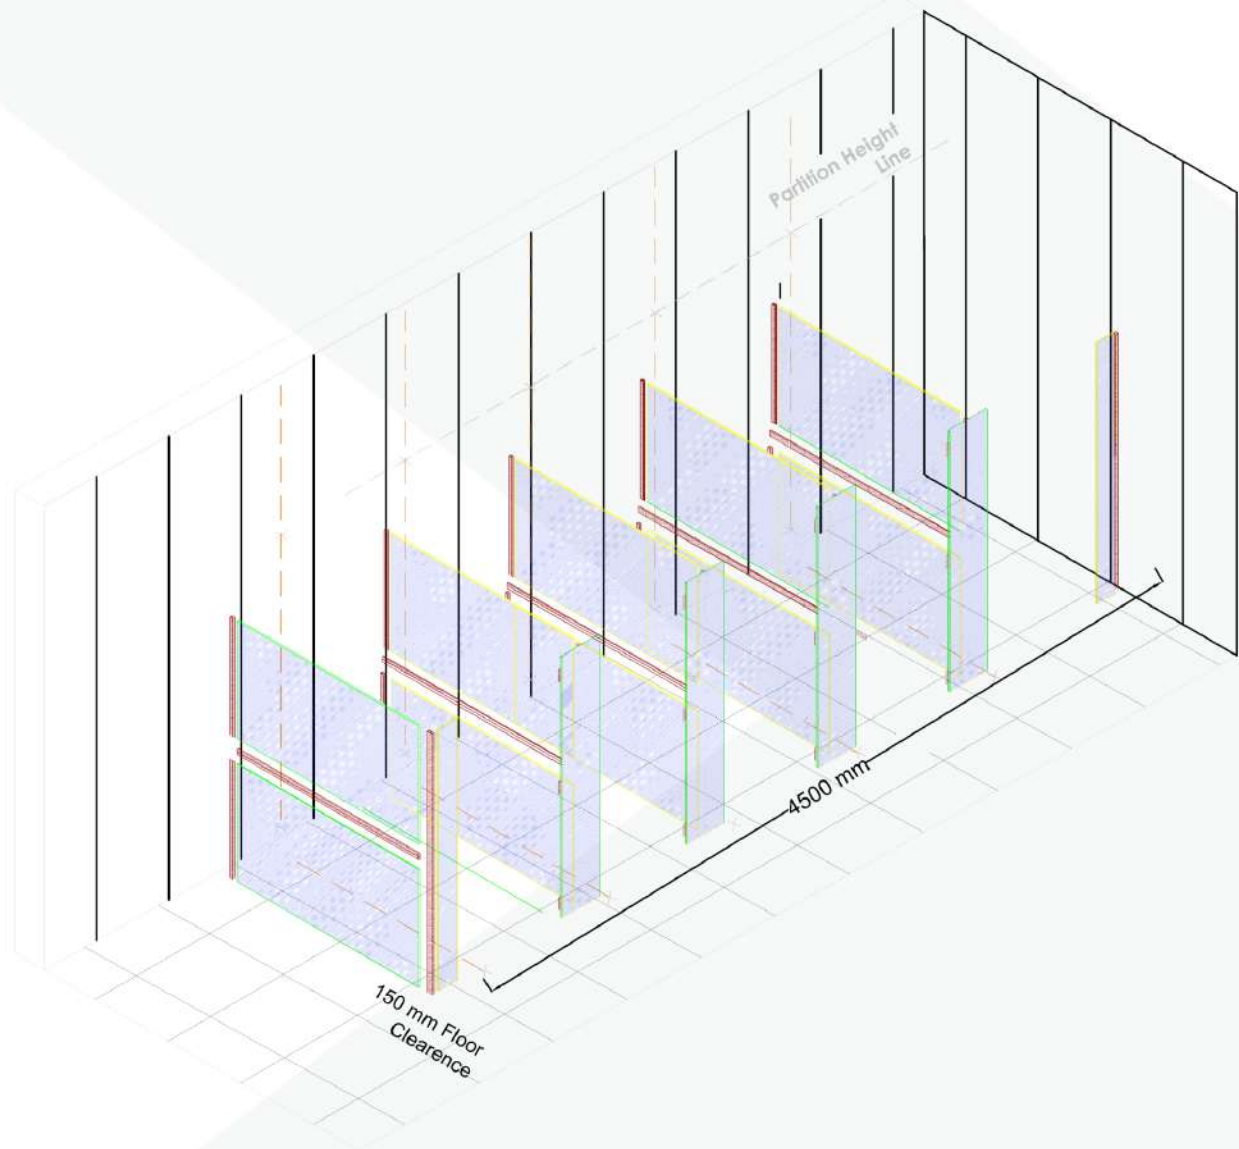


- Fix and secure wall pilaster into U-profile using the fitting provided.
- Fix U-profile to end pilasters, then secure the pilaster to the partition with fixings provided.
- Drill and fix the support leg onto bottom of the pilaster. Leg position should be at the centre of the pilaster.
- Wind the support leg until panel is level, then drill and secure leg to the floor.

Step 04

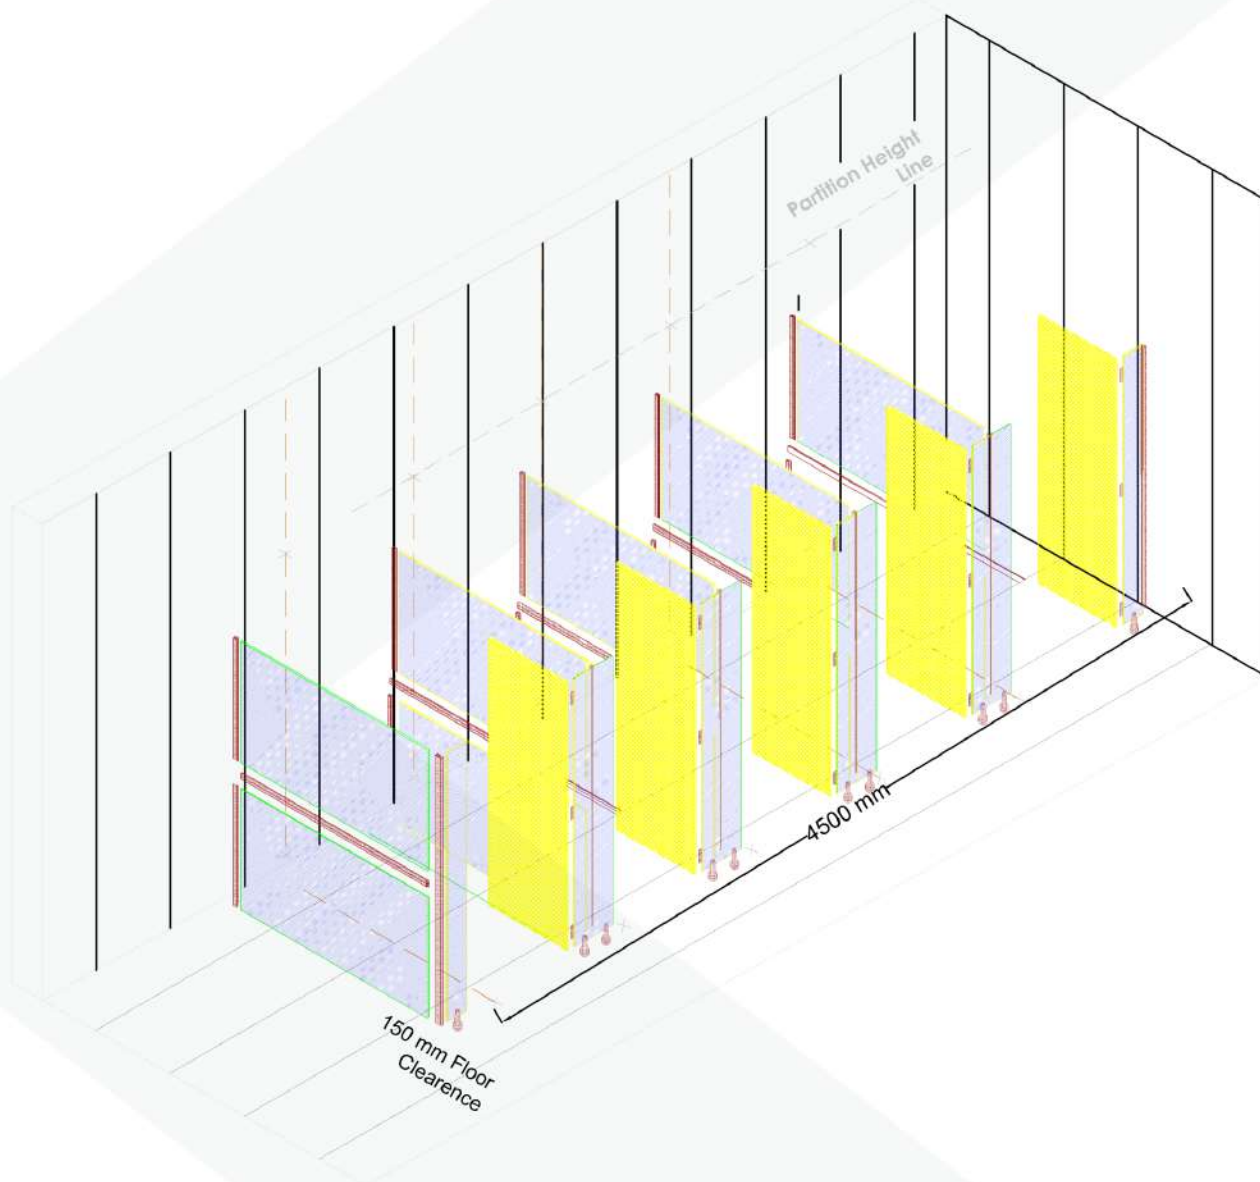


Fix and secure mid pilasters into the U-profile using the fitting provided.

Fix 1xL-profile to the end divider(s) and end pilaster(s) for the corner cubicle.

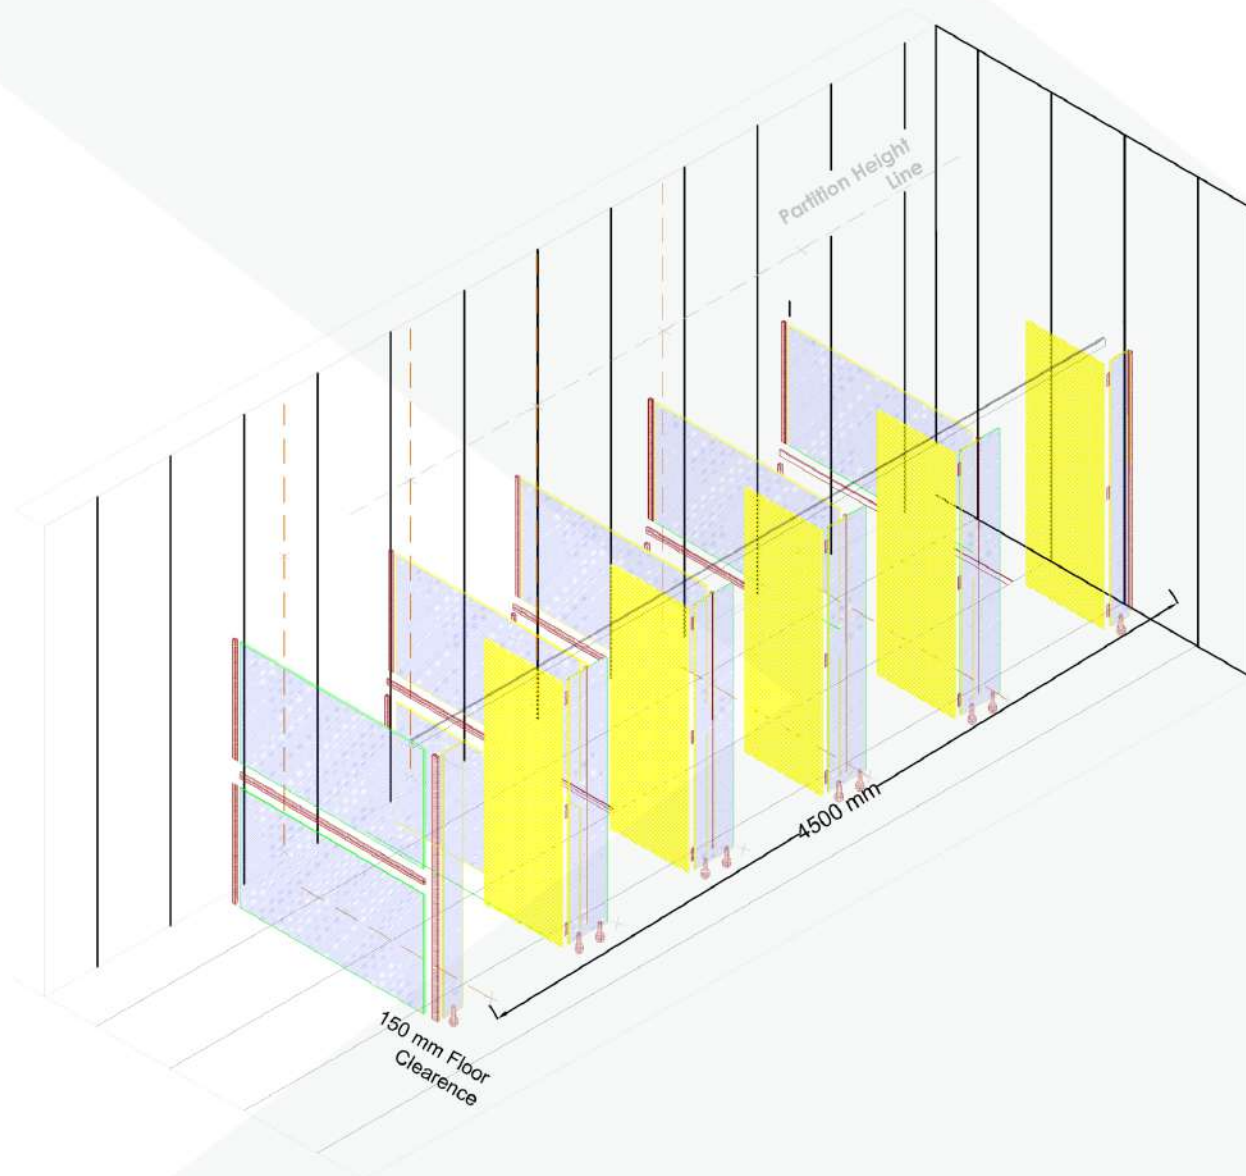

- Mark and drill pilot holes in the top section of top rail to fix to each pilaster.
- Drill and fix top rail down into the top of the front pilaster.

Step 06

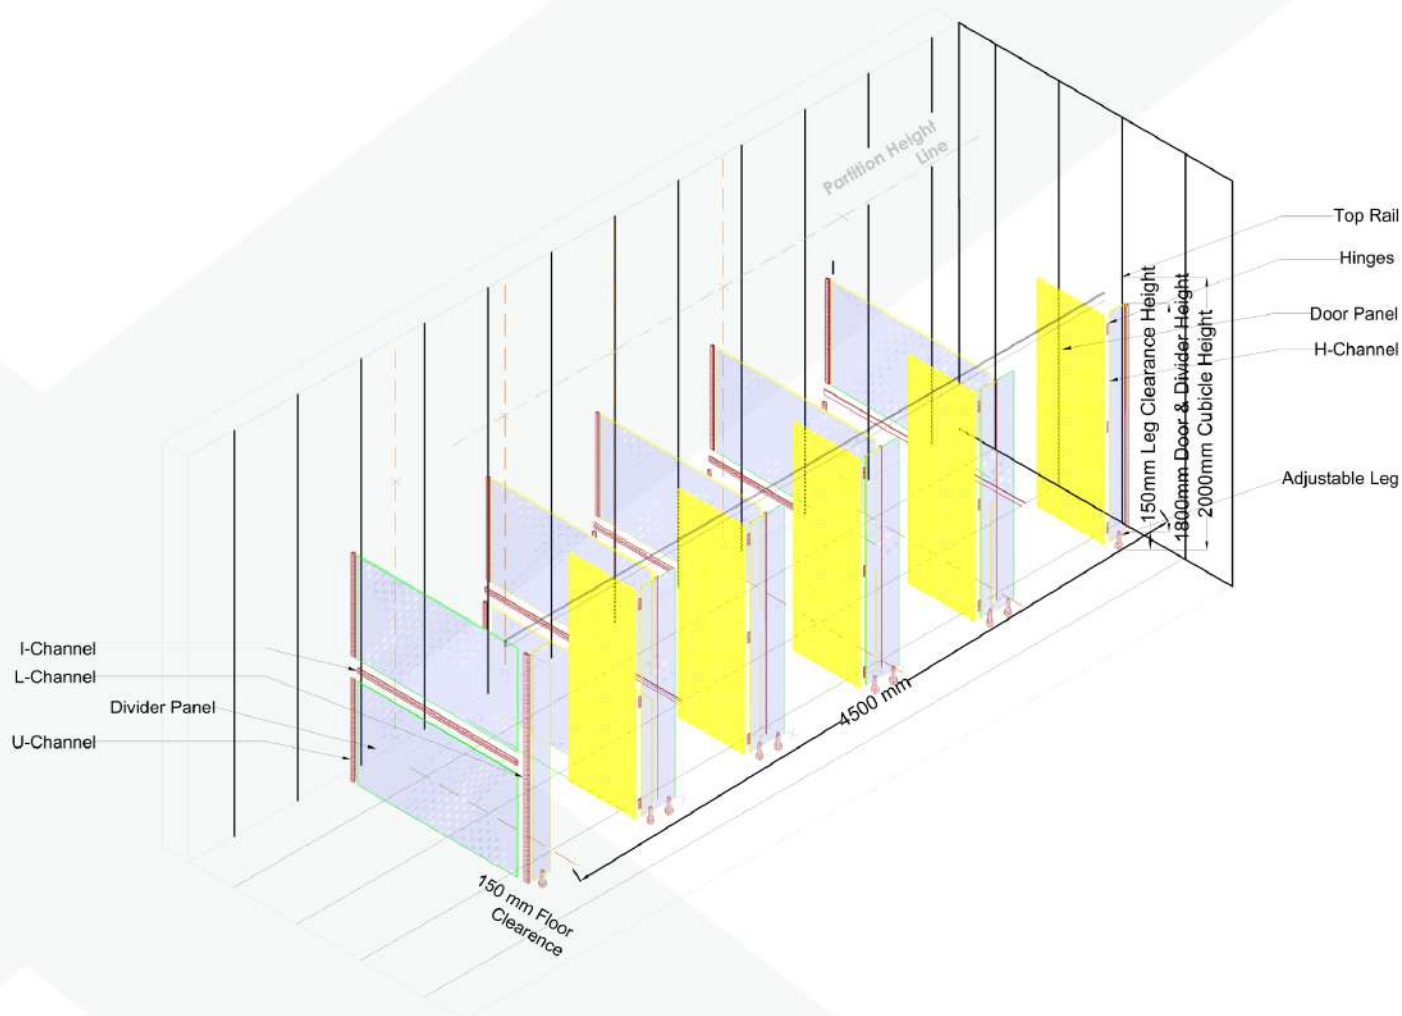

- Cubicle doors are adjustable in width. Cut the doors to the correct size you require.
- Door size will be of 600mm, fix door to the pilaster using fitting Hinges.
- Secure and fix the cubicle doors to the front pilasters by using the 3X gravity hinges.
- Install the indicator locks, door knob, and coat hook once doors have been fitted.
- For outward opening doors please use the outward opening lock. Latch, which is fitted to the outside of the pilasters.



Whatsapp Us



Expert Support



Download page



Cubiclexpress.com

